

**Levitronix® Standard Article List and Order Information**  
**Bearingless Fan BFS-i06, Accessories and Spare Parts**

Article Name (and Description)	Part No.	Article Category	Note
<b>Standard System Configurations</b>			
<b>Bearingless Fan BFS-i06.1</b> (ATEX/IECEX, 5 m + 0.2 m PVC motor cable with TE connectors for power and PLC)	<b>100-10184</b>	BFS-(i)	
<b>Bearingless Fan BFS-i06.1-22</b> (ATEX/IECEX, 2.2 m + 0.8 m PVC motor cable with TE connectors for power and PLC)	<b>100-10185</b>	BFS-(i)	
<b>Accessories</b>			
<b>Adaptor Cable Set</b> (Set of ICP-5.1-03 and ICS-5.1-03)	<b>100-91510</b>	Accessories BFS	
<b>Adaptor Cable Power ICP-5.1-03</b> (0.3 m, open wires with TE connector)	<b>190-10463</b>	Accessories BFS	Connection of fan cable to DC power supply.
<b>Adaptor Cable Power ICP-5.1-15</b> (1.5 m, open wires with TE connector)	<b>190-10490</b>		
<b>Adaptor Cable Signals ICS-5.1-03</b> (0.3 m, open wires with TE connector)	<b>190-10464</b>	Accessories BFS	Connection of fan cable to PLC signals and RS485 fieldbus.
<b>Adaptor Cable Signals ICS-5.1-15</b> (1.5 m, open wires with TE connector)	<b>190-10491</b>		
<b>AC/DC Power Supply TIB 240-148</b> (Traco, 48 V, 240 W, 85-264 V AC)	<b>100-40032</b>	Accessories BFS	
<b>Interface Panel FIP-2.1</b> (Connect up to 4 fans, common RS485 bus and power supply, direct connection of LUI-B.1 or USB-RS485 adaptor, push-in connectors for PLC)	<b>100-91659</b>	Accessories BFS	Easy wiring of power and PLC signals for up to four BFS-i06 fans.
<b>User Panel LUI-B.1-06</b> (Handheld with firmware A8.00, IP65, 5 to 24 V supply)	<b>100-30549</b>	Accessories Pump Systems	Control of fan via handheld device with display and menu buttons.
<b>USB-RS485 Adaptor YN-485I-TR</b> (Isolated USB to RS485 adaptor with termination resistor, 2 m cable with PVC jacket, USB to screw type connector)	<b>100-30392</b>	Accessories IPS	Control or service via USB port of a PC with Levitronix® Service Software.
<b>IP Adaptor Cable Signal 6 Wires ICS-1.1-10</b> (1 m, PVC jacket, circular to circular connector)	<b>190-10344</b>	Accessories IPS	Connection of user panel (LUI-B.1) to interface panel (FIP-2.1).
<b>IP Adaptor Cable Signal 6 Wires ICS-1.1-30</b> (3 m, PVC jacket, circular to circular connector)	<b>190-10345</b>		
<b>IP Adaptor Cable Signal 6 Wires ICS-1.2-10</b> (1 m, PVC jacket, circular to screw type connector)	<b>190-10440</b>	Accessories IPS	Connection of user panel (LUI-B.1) to adaptor cable (ICS-5.1) and 5 to 24 V supply.
<b>IP Adaptor Cable Signal 6 Wires ICS-1.2-50</b> (5 m, PVC jacket, circular to screw type connector)	<b>190-10346</b>		
<b>IP Adaptor Cable Signal 6 Wires ICS-1.3-50</b> (5 m, PVC jacket, circular to screw type connector)	<b>190-10389</b>	Accessories IPS	Connection of interface panel (FIP-2.1) to USB adaptor (YN-485I-TR).
<b>ATEX Cable Sealing System ACS-A.1</b> (Roxtec)	<b>100-90292</b>	Accessories Pump Systems	
<b>Spare Parts</b>			
--	--		