

Levitronix® Standard Article List and Order Information
LEVIFLOW® LFS-Series, Sets, Accessories and Spare Parts

Article Name (and Description)	Part No.	Article Category	Note
LEVIFLOW® Sets - Flowsensor with Single-Channel Converters LFC-1C/LFC-1C-F4			
LeviFlow Set LFS-008-Z or LFS-008-U + LFC-1C-F4 Sensor LFS-008-Z or LFS-008-U (0.8 lpm, Z or U shape, calibrated) Converter LFC-1C-F4 (24VDC, 2 Digital Outputs, 1 Digital Input, RS485) <i>Note: Converter contains calibrated sensor specific parameters</i> <i>Note: Extension cables to be ordered as separate article.</i>	100-90625 or 100-90626	LEVIFLOW LFS Flowmeter	
LeviFlow Set LFS-04-Z or LFS-04-U + LFC-1C Sensor LFS-04-Z or LFS-04-U (4 lpm, Z or U shape, calibrated, 3/8" tube fittings) Converter LFC-1C (24VDC, 2 Digital Outputs, 1 Digital Input, RS485) <i>Note: Converter contains calibrated sensor specific parameters</i> <i>Note: Extension cables to be ordered as separate article.</i>	100-90604 or 100-90605	LEVIFLOW LFS Flowmeter	
LeviFlow Set LFS-04-Z-T025 or LFS-04-U-T025 + LFC-1C Sensor LFS-04-Z-T025 or LFS-04-U-T025 (4 lpm, Z or U shape, calibrated, 1/4" tube fittings) Converter LFC-1C (24VDC, 2 Digital Outputs, 1 Digital Input, RS485) <i>Note: Converter contains calibrated sensor specific parameters</i> <i>Note: Extension cables to be ordered as separate article.</i>	100-90627 or 100-90628	LEVIFLOW LFS Flowmeter	
LeviFlow Set LFS-04H-Z or LFS-04H-U + LFC-1C Sensor LFS-04H-Z or LFS-04H-U (High Temp., 4 lpm, Z or U shape, calibrated, 3/8" tube fittings) Converter LFC-1C (24VDC, 2 Digital Outputs, 1 Digital Input, RS485) <i>Note: Converter contains calibrated sensor specific parameters</i> <i>Note: Extension cables to be ordered as separate article.</i>	100-90630 or 100-90631	LEVIFLOW LFS Flowmeter	
LeviFlow Set LFS-08-Z or LFS-08-U + LFC-1C Sensor LFS-08-Z or LFS-08-U (8 lpm, Z or U shape, calibration included) Converter LFC-1C (24VDC, 2 Digital Outputs, 1 Digital Input, RS485) <i>Note: Converter contains calibrated sensor specific parameters</i> <i>Note: Extension cables to be ordered as separate article.</i>	100-90606 or 100-90607	LEVIFLOW LFS Flowmeter	
LeviFlow Set LFS-08H-Z or LFS-08H-U + LFC-1C Sensor LFS-08H-Z or LFS-08H-U (High Temp., 8 lpm, Z or U shape, calibration included) Converter LFC-1C (24VDC, 2 Digital Outputs, 1 Digital Input, RS485) <i>Note: Converter contains calibrated sensor specific parameters</i> <i>Note: Extension cables to be ordered as separate article.</i>	100-90813 or 100-90812	LEVIFLOW LFS Flowmeter	
LeviFlow Set LFS-20-Z or LFS-20-U + LFC-1C Sensor LFS-20-Z or LFS-20-U (20 lpm, Z or U shape, calibration included) Converter LFC-1C (24VDC, 2 Digital Outputs, 1 Digital Input, RS485) <i>Note: Converter contains calibrated sensor specific parameters</i> <i>Note: Extension cables to be ordered as separate article.</i>	100-90608 or 100-90609	LEVIFLOW LFS Flowmeter	
LeviFlow Set LFS-20H-Z or LFS-20H-U + LFC-1C Sensor LFS-20H-Z or LFS-20H-U (20 lpm, Z or U shape, calibration included) Converter LFC-1C (24VDC, 2 Digital Outputs, 1 Digital Input, RS485) <i>Note: Converter contains calibrated sensor specific parameters</i> <i>Note: Extension cables to be ordered as separate article.</i>	100-90835 or 100-90836	LEVIFLOW LFS Flowmeter	
LeviFlow Set LFS-50-Z or LFS-50-U + LFC-1C Sensor LFS-50-Z or LFS-50-U (50 lpm, Z or U shape, calibration included) Converter LFC-1C (24VDC, 2 Digital Outputs, 1 Digital Input, RS485) <i>Note: Converter contains calibrated sensor specific parameters</i> <i>Note: Extension cables to be ordered as separate article.</i>	100-90621 or 100-90622	LEVIFLOW LFS Flowmeter	
LeviFlow Set LFS-50H-Z or LFS-50H-U + LFC-1C Sensor LFS-50H-Z or LFS-50H-U (50 lpm, Z or U shape, calibration included) Converter LFC-1C (24VDC, 2 Digital Outputs, 1 Digital Input, RS485) <i>Note: Converter contains calibrated sensor specific parameters</i> <i>Note: Extension cables to be ordered as separate article.</i>	100-90802 or 100-90714	LEVIFLOW LFS Flowmeter	
LeviFlow Set LFS-80-Z or LFS-80-U + LFC-1C Sensor LFS-80-Z or LFS-80-U (80 lpm, Z or U shape, calibration included) Converter LFC-1C (24VDC, 2 Digital Outputs, 1 Digital Input, RS485) <i>Note: Converter contains calibrated sensor specific parameters</i> <i>Note: Extension cables to be ordered as separate article.</i>	100-90623 or 100-90624	LEVIFLOW LFS Flowmeter	
LeviFlow Set LFS-80H-Z or LFS-80H-U + LFC-1C Sensor LFS-80H-Z or LFS-80H-U (80 lpm, Z or U shape, calibration included) Converter LFC-1C (24VDC, 2 Digital Outputs, 1 Digital Input, RS485) <i>Note: Converter contains calibrated sensor specific parameters</i> <i>Note: Extension cables to be ordered as separate article.</i>	100-90715 or 100-90716	LEVIFLOW LFS Flowmeter	
LEVIFLOW® Articles for Configurations with 6-Channel Converters LFC-6C/LFC-6CIO			
LeviFlow Converter LFC-6C (24VDC, 6-Channel, RS485) <i>Note: Connector and Termination Box to be ordered as separate article.</i> <i>Note: Does not work with LFS-008.</i>	100-30315	LEVIFLOW LFS Flowmeter	
LeviFlow Converter LFC-6CIO (24VDC, 6-Channel, RS485, Analog and Digital IO's) <i>Note: Connector and Termination Box to be ordered as separate article.</i>	100-30337	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-008-Z or LFS-008-U (0.8 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated, 3/8" tube fittings)	100-30323 100-30324	LEVIFLOW LFS Flowmeter	<i>Note: Works with LFC-1C-F4 and LFC-6CIO converters only.</i>
LeviFlow Sensor LFS-04-Z or LFS-04-U (4 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated, 3/8" tube fittings)	100-30304 100-30305	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-04-Z-T025 or LFS-04-U-T025 (4 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated, 1/4" tube fittings)	100-30321 100-30322	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-04H-Z or LFS-04-U (High Temp., 4 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated, 3/8" tube fit.)	100-30330 100-30331	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-08-Z or LFS-08-U (8 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated)	100-30306 100-30307	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-08H-Z or LFS-08H-U (High Temp., 8 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated)	100-30332 100-30333	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-20-Z or LFS-20-U (20 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated)	100-30308 100-30309	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-20H-Z or LFS-20H-U (High temp., 20 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated)	100-30372 100-30373	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-50-Z or LFS-50-U (50 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated)	100-30310 100-30311	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-50H-Z or LFS-50H-U (High temp., 50 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated)	100-30340 100-30341	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-80-Z or LFS-80-U (80 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated)	100-30312 100-30313	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-80H-Z or LFS-80H-U (High temp., 80 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated)	100-30342 100-30343	LEVIFLOW LFS Flowmeter	

Article Name (and Description)	Part No.	Article Category	Note
Accessories			
Pair of LeviFlow Extension Cable LFE-A.1-10 (1m, PVC flameretardent, connector cover)	190-10162	Accessories LEVIFLOW	
Pair of LeviFlow Extension Cable LFE-A.1-30 (3m, PVC flameretardent, connector cover)	190-10163		
Pair of LeviFlow Extension Cable LFE-A.1-60 (6m, PVC flameretardent, connector cover)	190-10164		
Pair of LeviFlow Extension Cable LFE-A.2-10 (1m, FEP, connector cover)	190-10165	Accessories LEVIFLOW	
Pair of LeviFlow Extension Cable LFE-A.2-30 (3m, FEP, connector cover)	190-10166		
Pair of LeviFlow Extension Cable LFE-A.2-60 (6m, FEP, connector cover)	190-10167		
LeviFlow Y-Adaptor Cable LFA-A.1 (PVC jacket, audio to SMB connectors)	190-10268	Accessories LEVIFLOW	Needed to connect LFS sensors to LFC-6CIO.
LeviFlow Y-Adaptor Cable LFE-D.1-10 (1m, PVC jacket, audio to SMB with PP cover)	190-10296	Accessories LEVIFLOW	Needed to connect LFS sensor to LFC-6CIO with protection cover of SMB sensor connectors.
LeviFlow Y-Adaptor Cable LFE-D.1-30 (3m, PVC jacket, audio to SMB with PP cover)	190-10297		
LeviFlow Y-Adaptor Cable LFE-D.1-60 (6m, PVC jacket, audio to SMB with PP cover)	190-10298		
LeviFlow Connector for LFC-6C (for wiring)	100-30316	Accessories LEVIFLOW	For LFC-6C and LFC-6CIO.
LeviFlow Termination Box for LFC-6C (for termination of RS485)	100-30317	Accessories LEVIFLOW	For LFC-6C and LFC-6CIO.
USB-RS485 YN-485I-TR (USB to RS485 Adaptor, Isolated, Cable with Termination Resistance)	100-30392	Accessories IPS	
Spare Parts			
LeviFlow Sensor LFS-008-Z or LFS-008-U (0.8 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibration incl., 1/4" tube fittings)	100-30323 100-30324	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-04-Z or LFS-04-U (4 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated., 3/8" tube fittings)	100-30304 100-30305	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-04-Z-T025 or LFS-04-U-T025 (4 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated., 1/4" tube fittings)	100-30321 100-30322	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-04H-Z or LFS-04H-U (High Temp., 4 lpm, 0.5m FEP cable, Z or U shape, connector cover, calibrated, 3/8" tube fit.)	100-30330 100-30331	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-08-Z or LFS-08-U (8 lpm, FEP cable, Z or U shape, connector cover, calibrated, 3/8" tube fittings)	100-30306 100-30307	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-08H-Z or LFS-08H-U (High Temp., 8 lpm, FEP cable, Z or U shape, connector cover, calibrated, 3/8" tube fittings)	100-30332 100-30333	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-20-Z or LFS-20-U (20 lpm, FEP cable, Z or U shape, connector cover, calibrated, 1/2" fittings)	100-30308 100-30309	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-20H-Z or LFS-20H-U (High temp., 20 lpm, FEP cable, Z or U shape, connector cover, calibrated, 1/2" tube fittings)	100-30372 100-30373	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-50-Z or LFS-50-U (50 lpm, FEP cable, Z or U shape, connector cover, calibrated, 3/4" tube fittings)	100-30310 100-30311	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-50H-Z or LFS-50H-U (High temp., 50 lpm, FEP cable, Z or U shape, connector cover, calibrated, 3/4" tube fittings)	100-30340 100-30341	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-80-Z or LFS-80-U (80 lpm, FEP cable, Z or U shape, connector cover, calibrated, 1" tube fittings)	100-30312 100-30313	LEVIFLOW LFS Flowmeter	
LeviFlow Sensor LFS-80H-Z or LFS-80H-U (High temp., 80 lpm, FEP cable, Z or U shape, connector cover, calibrated, 1" tube fittings)	100-30342 100-30343	LEVIFLOW LFS Flowmeter	
LeviFlow Converter LFC-1C (24VDC, Single Channel, 2 Digital Outputs, 1 Digital Input, 1 Analog Output, RS485)	100-30314	Spare Parts LEVIFLOW	
LeviFlow Converter LFC-1C-F4 (for LFS-008) (24VDC, Single Channel, 2 Digital Outputs, 1 Digital Input, 1 Analog Output, RS485)	100-30325	Spare Parts LEVIFLOW	
LeviFlow Converter LFC-6C (24VDC, 6-Channel, RS485)	100-30315	LEVIFLOW LFS Flowmeter	For LFC-6C and LFC-6CIO.
LeviFlow Converter LFC-6CIO (24VDC, 6-Channel, RS485, Analog/Digital IO's)	100-30337	LEVIFLOW LFS Flowmeter	For LFC-6C and LFC-6CIO.
Connector for LFC-6CIO / Analog Out	100-30351	Spare Parts LEVIFLOW	
Connector for LFC-6CIO / Digital I/O	100-30352	Spare Parts LEVIFLOW	