

**Levitronix® Standard Article List and Order Information**  
**LEVIFLOW® LFSC-D Series for PFA Tubing, Sets, Accessories and Spare Parts**

Article Name (and Description)	Part No.	Article Category	Note
<b>LeviFlow Sets - Flowsensor with Converter</b>			
<b>LFSC-06D.1-001 + LFC-1C-PC</b> (5/32" x 1/4" Tubing, 0-1 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-91300</b>	LEVIFLOW LFSC Flowmeter	Adaptor/extension cables to be ordered as separate article.
<b>LFSC-06D.1-002 + LFC-1C-PC</b> (1/8" x 1/4" Tubing, 0-1 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-91542</b>	LEVIFLOW LFSC Flowmeter	
<b>LFSC-09D.1-001 + LFC-1C-PC</b> (1/4" x 3/8" Tubing, 0-4 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-91301</b>	LEVIFLOW LFSC Flowmeter	
<b>LFSC-11D.1-001 + LFC-1C-PC</b> (3/8" x 1/2" Tubing, 0-20 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-91302</b>	LEVIFLOW LFSC Flowmeter	
<b>LFSC-17D.1-001 + LFC-1C-PC</b> (5/8" x 3/4" Tubing, 0-50 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-91303</b>	LEVIFLOW LFSC Flowmeter	
<b>LFSC-23D.1-001 + LFC-1C-PC</b> (7/8" x 1" Tubing, 0-80 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-91295</b>	LEVIFLOW LFSC Flowmeter	
<b>LFSC-30D.1-001 + LFC-1C-PC</b> (11/10" x 11/4" Tubing, 0-160 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-91296</b>	LEVIFLOW LFSC Flowmeter	
<b>LFSC-35D.1-001 + LFC-1C-PC</b> (121/64" x 11/2" Tubing, 0-320 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-91304</b>	LEVIFLOW LFSC Flowmeter	
<b>LEVIFLOW® Articles for Configurations with 6-Channel Converters LFC-6C/LFC-6CIO</b>			
<b>LeviFlow Converter LFC-6CIO-PC</b> (24VDC, 6-Chan., RS485, Analog/Dig. IO's) Note 1: Connector and Termination Box to be ordered as separate article. Note 2: EMI ferrite for Termination wires to be ordered as separate article. Note 3: Works with LFSC-06D.1/09D.1/11D.1/17D.1/23D.1/30D.1/35D.1 Note 4: Article packages with flow sensors available on request.	<b>100-30446</b>	LEVIFLOW LFSC Flowmeter	
<b>Accessories</b>			
<b>LeviFlow Interconnect Cable LFI-C.1-10</b> (1m, PVC) <b>LeviFlow Interconnect Cable LFI-C.1-30</b> (3m, PVC) <b>LeviFlow Interconnect Cable LFI-C.1-60</b> (6m, PVC)	<b>190-10307</b> <b>190-10308</b> <b>190-10309</b>	Accessories LEVIFLOW	
<b>LeviFlow Adaptor Extension Cable LFE-C.2-10</b> (1m, PVC, Wall-Mount. Connector) <b>LeviFlow Adaptor Extension Cable LFE-C.2-30</b> (3m, PVC, Wall-Mount. Connector) <b>LeviFlow Adaptor Extension Cable LFE-C.2-60</b> (6m, PVC, Wall-Mount. Connector)	<b>190-10310</b> <b>190-10311</b> <b>190-10312</b>	Accessories LEVIFLOW	
<b>LeviFlow Converter Starter-Kit LFC-1C-PC-SK</b> (Converter, AC/DC Desktop Power Supply, Cabling, Config.-Software)	<b>100-91072</b>	Accessories LEVIFLOW	
<b>LeviFlow Connector Box for LFC-6CIO-PC</b> (for wiring)	<b>100-30447</b>	Accessories LEVIFLOW	For LFC-6CIO-PC.
<b>LeviFlow Termination Box for LFC-6C</b> (for termination of RS485)	<b>100-30317</b>	Accessories LEVIFLOW	For LFC-6CIO-PC.
<b>LeviFlow Splitting Ferrite</b>	<b>100-30353</b>	Accessories LEVIFLOW	Is recommended for all sensor cables, when stacking multiple LFC-6CIO-PC in order to avoid crosstalking.
<b>USB-RS485 YN-485I-TR</b> (USB to RS485 Adaptor, Isolated, Cable with Termination Resistance)	<b>100-30392</b>	Accessories IPS	
<b>Spare Parts</b>			
<b>LeviFlow Clamp-On Sensor LFSC-06D.1-001</b> (5/32"x1/4" Tubing, 0-1 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-30439</b>	Spare Parts LEVIFLOW	
<b>LeviFlow Clamp-On Sensor LFSC-06D.1-002</b> (1/8"x1/4" Tubing, 0-1 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-30494</b>	Spare Parts LEVIFLOW	
<b>LeviFlow Clamp-On Sensor LFSC-09D.1-001</b> (1/4"x3/8" Tubing, 0-4 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-30440</b>	Spare Parts LEVIFLOW	
<b>LeviFlow Clamp-On Sensor LFSC-11D.1-001</b> (3/8"x1/2" Tubing, 0-20 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-30441</b>	Spare Parts LEVIFLOW	
<b>LeviFlow Clamp-On Sensor LFSC-17D.1-001</b> (5/8"x3/4" Tubing, 0-50 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-30442</b>	Spare Parts LEVIFLOW	
<b>LeviFlow Clamp-On Sensor LFSC-23D.1-001</b> (7/8"x1" Tubing, 0-80 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-30437</b>	Spare Parts LEVIFLOW	
<b>LeviFlow Clamp-On Sensor LFSC-30D.1-001</b> (11/10"x11/4" Tubing, 0-160 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-30438</b>	Spare Parts LEVIFLOW	
<b>LeviFlow Clamp-On Sensor LFSC-35D.1-001</b> (121/64"x11/2" Tubing, 0-320 l/min) Calibration for PFA Tubing with Water at 20°C	<b>100-30443</b>	Spare Parts LEVIFLOW	
<b>LeviFlow Converter LFC-1C-PC</b> (24VDC, Single Channel, 2 Digital Outputs, 1 Digital Input, 1 Analog Output, RS485)	<b>100-30374</b>	Spare Parts LEVIFLOW	Includes an EMI ferrite (article # 100-30353) for the flow sensor cable.
<b>LeviFlow Converter LFC-6CIO-PC</b> (24VDC, 6-Channel, RS485, Analog/Digital IO's)	<b>100-30446</b>	LEVIFLOW LFSC Flowmeter	
<b>Connector for LFC-6CIO / Analog Out</b>	<b>100-30351</b>	Spare Parts LEVIFLOW	
<b>Connector for LFC-6CIO / Digital I/O</b>	<b>100-30352</b>	Spare Parts LEVIFLOW	