

Levitronix® Standard Article List and Order Information
LEVIFLOW® LFS-SU Series - Single-Use Sensor, Accessories and Spare Parts

Article Name (and Description)	Part No.	Article Category	Note		
LeviFlow Single-Use Sensors and Converter					
Single-Use Sensor LFS-03SU-Z (Calibration at 20°C, 0.8 l/min, Triclamp 3/8", Z-Shape)	100-30375	LEVIFLOW LFS-SU Flowmeter			
Single-Use Sensor LFS-03SU-Z-G25 (Irradiated with Gamma Dosage ≥ 25 kGy)	100-30399				
Single-Use Sensor LFS-03SU-Z-SC1 (Calibration at 20°C, 0.8 l/min, Triclamp 3/8", Z-Shape)	100-30418				
Single-Use Sensor LFS-03SU-Z-SC1-G25 (Irradiated with Gamma Dosage ≥ 25 kGy)	100-30419				
Single-Use Sensor LFS-03SU-Z-SC1-Ex (ATEX/IECEx certified)	100-30514				
Single-Use Sensor LFS-06SU-Z (Calibration at 20°C, 8 l/min, Triclamp 3/8", Z-Shape)	100-30377				
Single-Use Sensor LFS-06SU-Z-G25 (Irradiated with Gamma Dosage ≥ 25 kGy)	100-30400				
Single-Use Sensor LFS-06SU-Z-SC1 (Special Calibr. at 20°C, 8 l/min, Triclamp 3/8", Z-Shape)	100-30394				
Single-Use Sensor LFS-06SU-Z-SC1-G25 (Irradiated with Gamma Dosage ≥ 25 kGy)	100-30406				
Single-Use Sensor LFS-06SU-Z-SC1-Ex (ATEX/IECEx certified)	100-30515				
Single-Use Sensor LFS-10SU-Z (Water 20°C, 20 l/min, Triclamp 1/2", Z-Shape)	100-30397				
Single-Use Sensor LFS-10SU-Z-G25 (Irradiated with Gamma Dosage ≥ 25 kGy)	100-30405				
Single-Use Sensor LFS-10SU-Z-SC1 (Special Calibr. at 20°C, 20 l/min, Triclamp 1/2", Z-Shape)	100-30408				
Single-Use Sensor LFS-10SU-Z-SC1-G25 (Irradiated with Gamma Dosage ≥ 25 kGy)	100-30416				
Single-Use Sensor LFS-10SU-Z-SC1-Ex (ATEX/IECEx certified)	100-30516				
Single-Use Sensor LFS-15SU-Z (Water 20°C, 50 l/min, Triclamp 1", Z-Shape)	100-30412				
Single-Use Sensor LFS-15SU-Z-G25 (Irradiated with Gamma Dosage ≥ 25 kGy)	100-30111				
Single-Use Sensor LFS-15SU-Z-SC1 (Special Calibr. at 20°C, 50 l/min, Triclamp 1", Z-Shape)	100-30431				
Single-Use Sensor LFS-15SU-Z-SC1-G25 (Irradiated with Gamma Dosage ≥ 25 kGy)	100-30432				
Single-Use Sensor LFS-15SU-Z-SC1-Ex (ATEX/IECEx certified)	100-30517				
Single-Use Sensor LFS-20SU.1-Z (Water 20°C, 80 l/min, Triclamp 1", Z-Shape)	100-30483				
Single-Use Sensor LFS-20SU.1-Z-G25 (Irradiated with Gamma Dosage ≥ 25 kGy)	100-30484				
Single-Use Sensor LFS-20SU-Z-SC1 (Water 20°C, 80 l/min, Triclamp 1", Z-Shape)	100-30464				
Single-Use Sensor LFS-20SU-Z-SC1-G25 (Irradiated with Gamma Dosage ≥ 25 kGy)	100-30465				
Single-Use Sensor LFS-20SU-Z-SC1-Ex (ATEX/IECEx certified)	100-30518				
<i>Note: Adaptor/extension cables to be ordered as separate article.</i>					
LeviFlow Converter LFC-1C-PC (24VDC, Single Channel, 2 Digital Outputs, 1 Digital Input, 1 Analog Output, RS485)	100-30374			Spare Parts LEVIFLOW	Includes an EMI ferrite (article # 100-30353) for the flow sensor cable.
LeviFlow Converter LFC-6CIO-PC (24VDC, 6-Channel, RS485, Analog/Digital IO's)	100-30446			LEVIFLOW LFC Flowmeter	
Accessories					
LeviFlow Interconnect Cable LFI-C.1-10 (1m, PVC)	190-10307			Accessories LEVIFLOW	
LeviFlow Interconnect Cable LFI-C.1-30 (3m, PVC)	190-10308				
LeviFlow Interconnect Cable LFI-C.1-60 (6m, PVC)	190-10309				
LeviFlow Adaptor Extension Cable LFE-C.2-10 (1m, PVC, Wall-Mountable Connector)	190-10310			Accessories LEVIFLOW	
LeviFlow Adaptor Extension Cable LFE-C.2-30 (3m, PVC, Wall-Mountable Connector)	190-10311				
LeviFlow Adaptor Extension Cable LFE-C.2-60 (6m, PVC, Wall-Mountable Connector)	190-10312				
LeviFlow Mounting Bracket LMK-1.2 (Anodized Alu., for LFS-03SU and LFS-06SU)	100-91478			Accessories LEVIFLOW	
LeviFlow Mounting Bracket LMK-2.2 (Anodized Alu., for LFS-10SU)	100-91479				
LeviFlow Mounting Bracket LMK-3.2 (Anodized Alu., for LFS-15SU)	100-91480				
LeviFlow Mounting Bracket LMK-4.2 (Anodized Alu., for LFS-20SU)	100-91481				
LeviFlow Mounting Bracket LMK-1.3 (Stainless Steel, for LFS-03SU and LFS-06SU)	100-91624			Accessories LEVIFLOW	Is needed for ATEX/IECEx flow sensors and applications.
LeviFlow Mounting Bracket LMK-2.3 (Stainless Steel, for LFS-10SU)	100-91625				
LeviFlow Mounting Bracket LMK-3.3 (Stainless Steel, for LFS-15SU)	100-91626				
LeviFlow Mounting Bracket LMK-4.3 (Stainless Steel, for LFS-20SU)	100-91627				
LeviFlow Converter Starter-Kit LFC-1C-PC-SK (Converter, AC/DC Desktop Power Supply, Cabling, Config.-Software)	100-91072	Accessories LEVIFLOW			
LeviFlow Connector Box for LFC-6CIO-PC (for wiring)	100-30447	Accessories LEVIFLOW	For LFC-6CIO-PC.		
LeviFlow Termination Box for LFC-6C (for termination of RS485)	100-30317	Accessories LEVIFLOW	For LFC-6CIO-PC.		
LeviFlow Splitting Ferrite	100-30353	Accessories LEVIFLOW	Is recommended for all sensor cables, when stacking multiple LFC-6CIO-PC in order to avoid crosstalking.		
LeviFlow YN-485I-TR (RS485/USB Adaptor, Cable with wiring connector, Termination, Isolated)	100-30392	Accessories IPS			
ATEX Cable Sealing System ACS-A.2	100-91628	Accessories LEVIFLOW	Is needed for ATEX/IECEx flow sensors and applications.		
Spare Parts					
NA	NA	NA			
NA	NA	NA			