



Benefits Of The Levitronix Pump

■ An Ultra-Clean Pump

Particle shedding of Levitronix pump compared to two diaphragm pumps

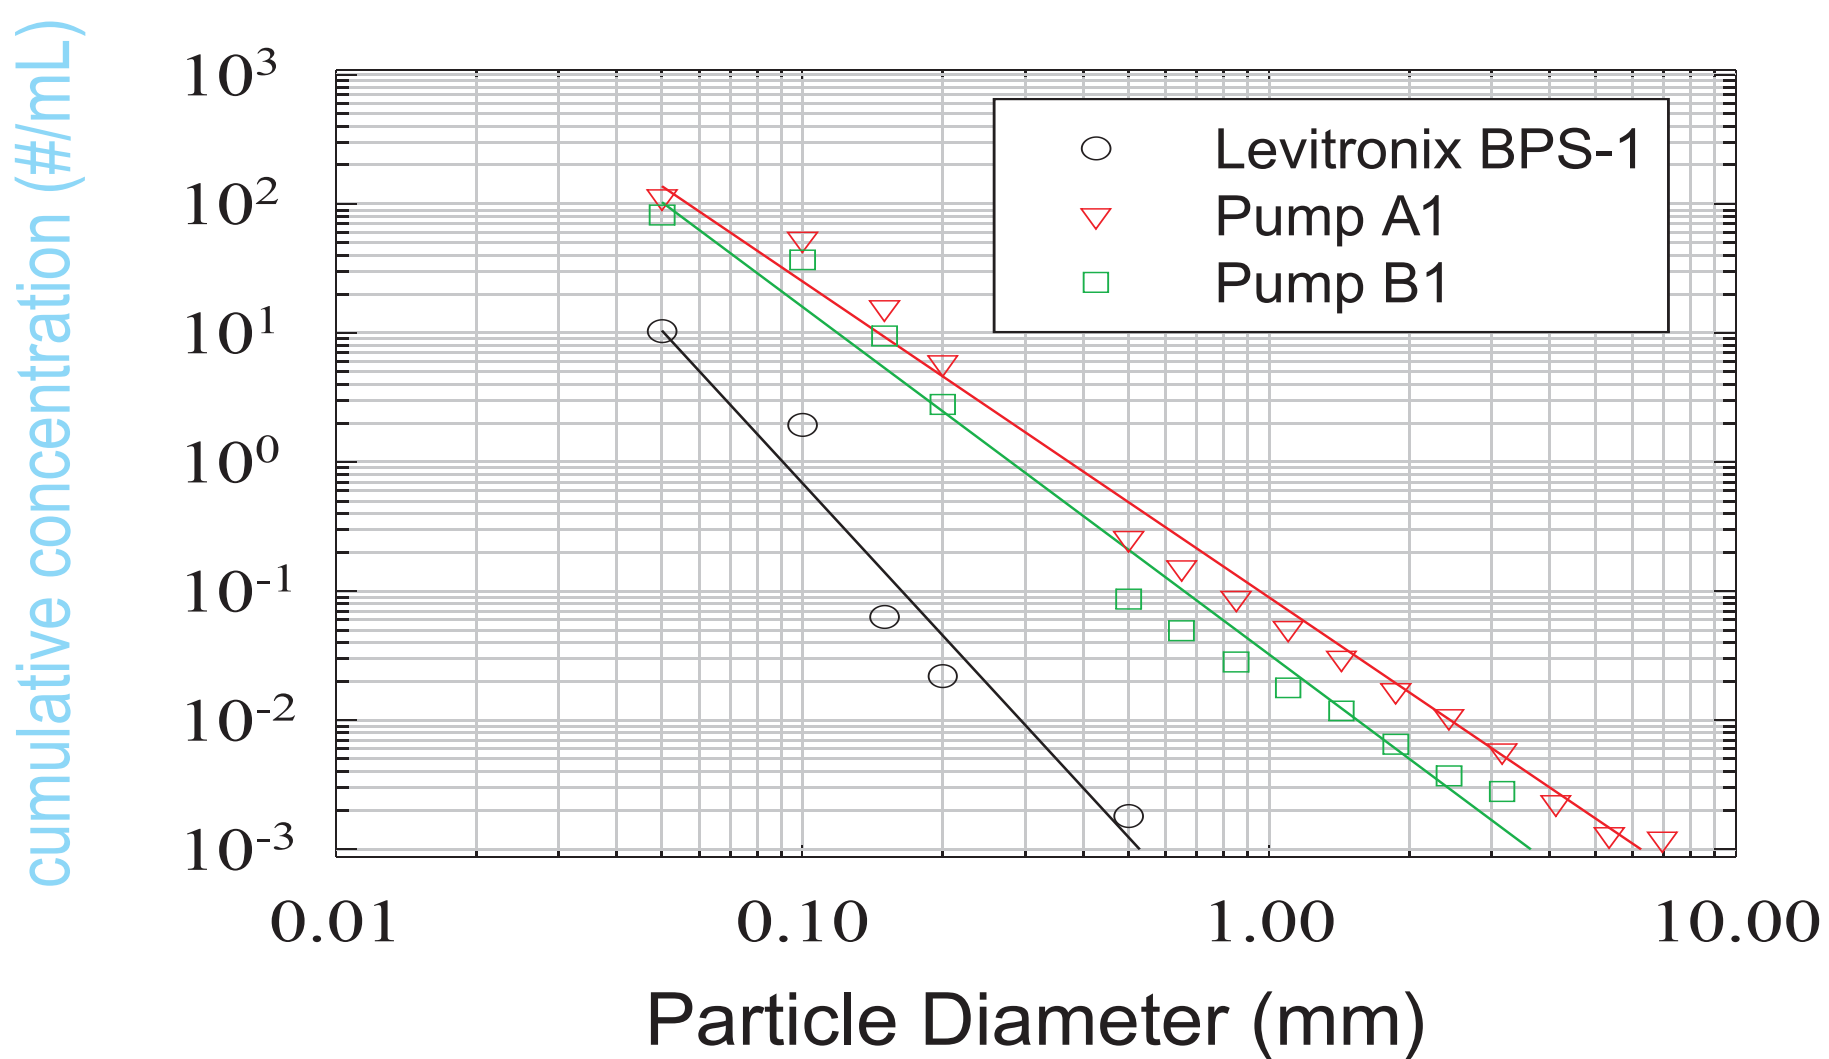



Trace metal extraction (14 days in 35% HCl)

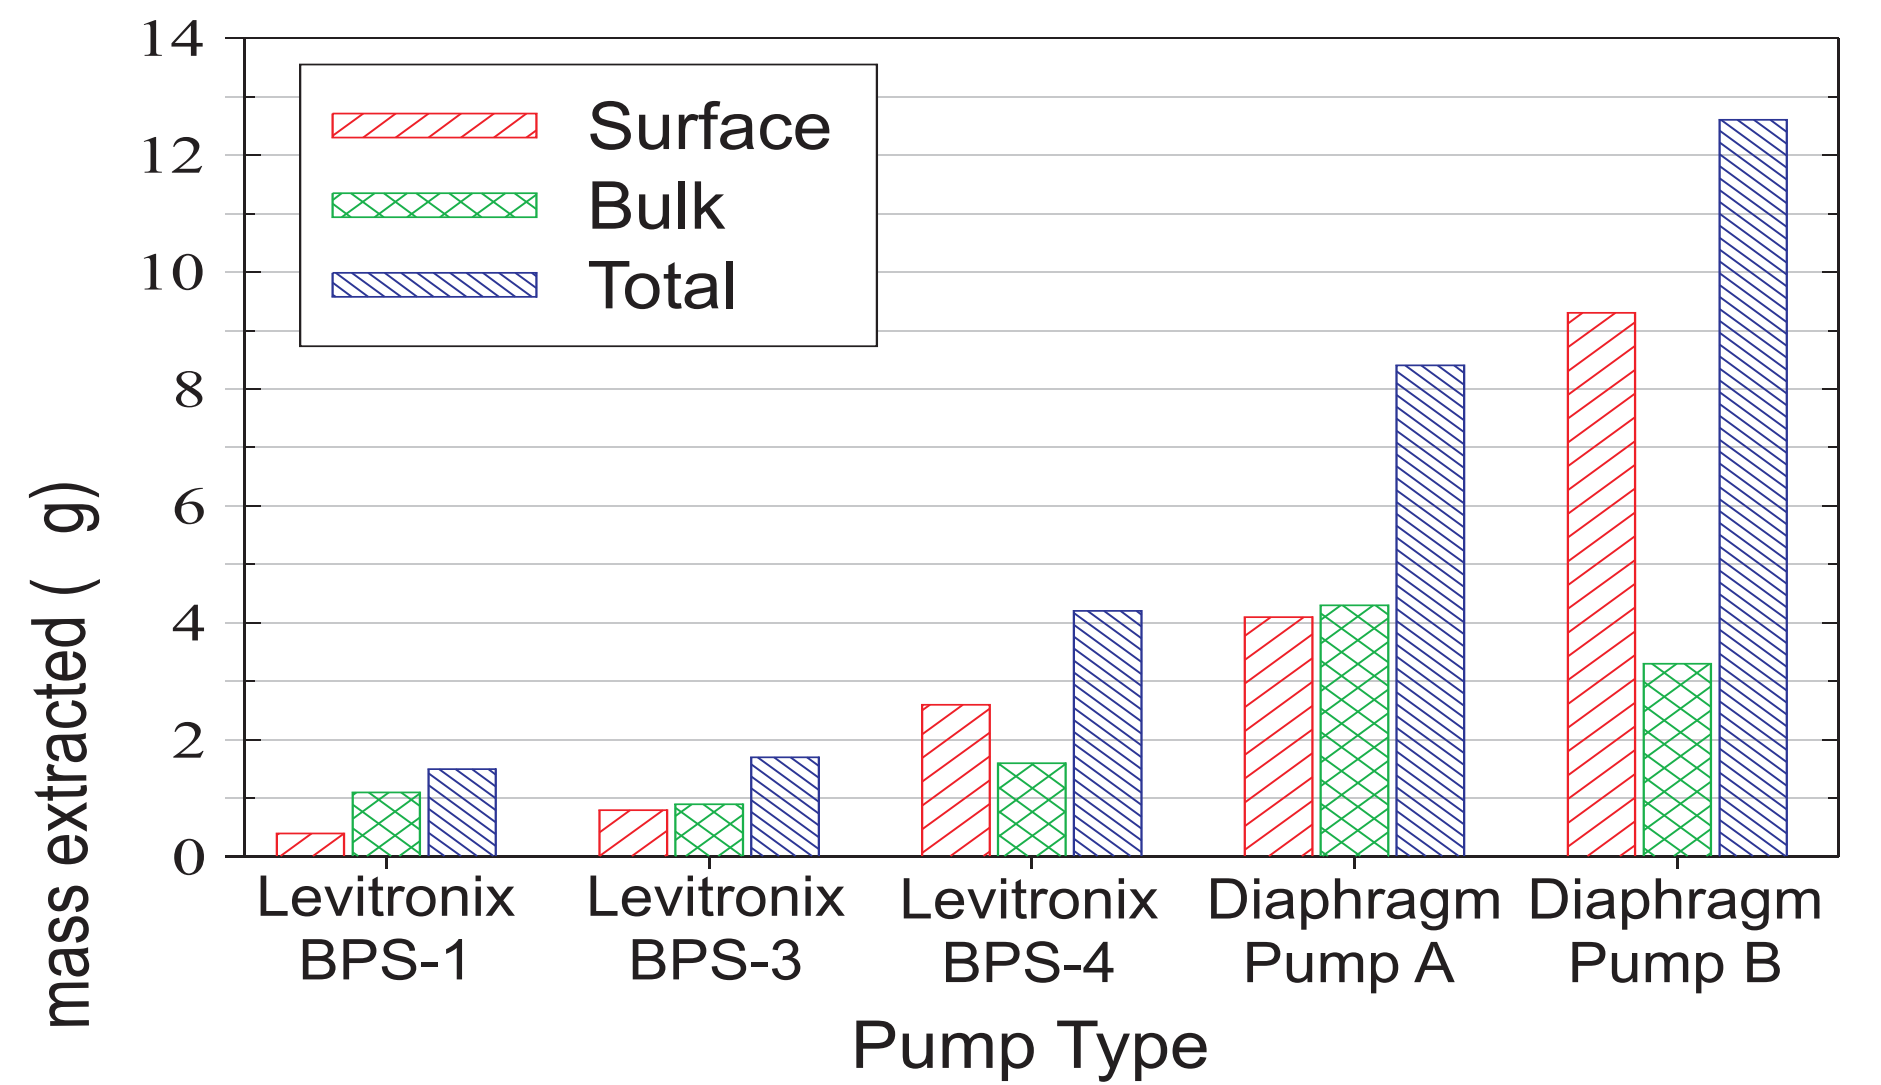



Levitronix pumps cause very little particle and metal contamination due to contact-free operation and small surface area

■ Continuous Flow Leading To Improved Filter Retention And Process Control


Flow & Pressure of Diaphragm Pump

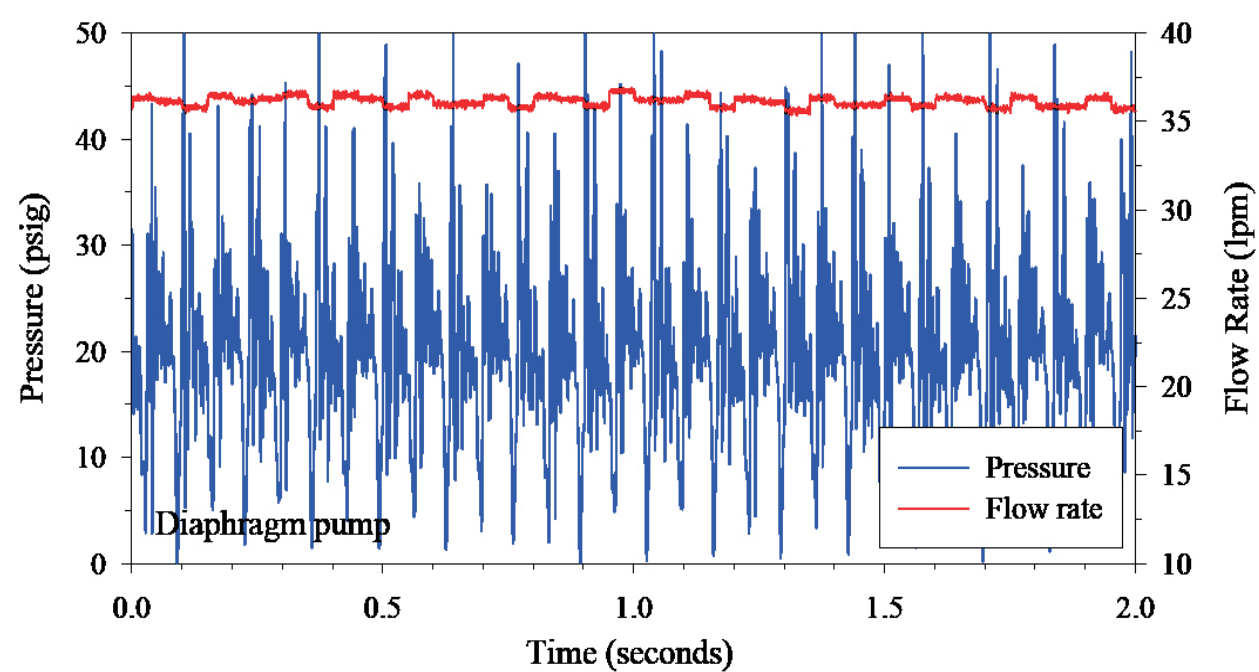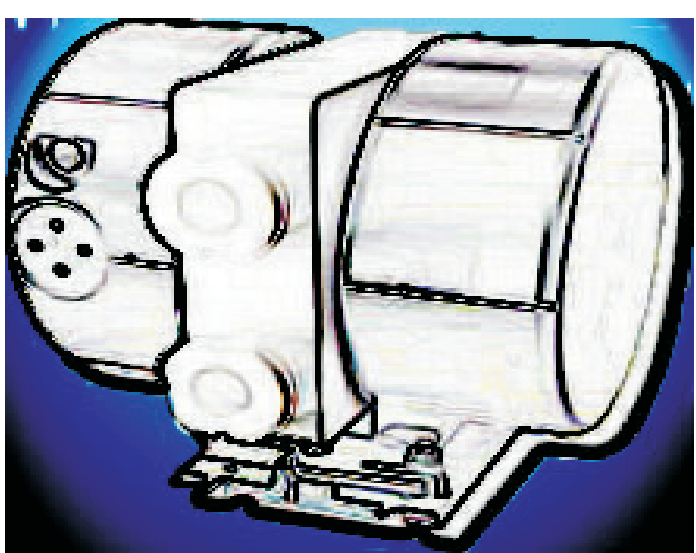


Flow & Pressure of Levitronix Pump

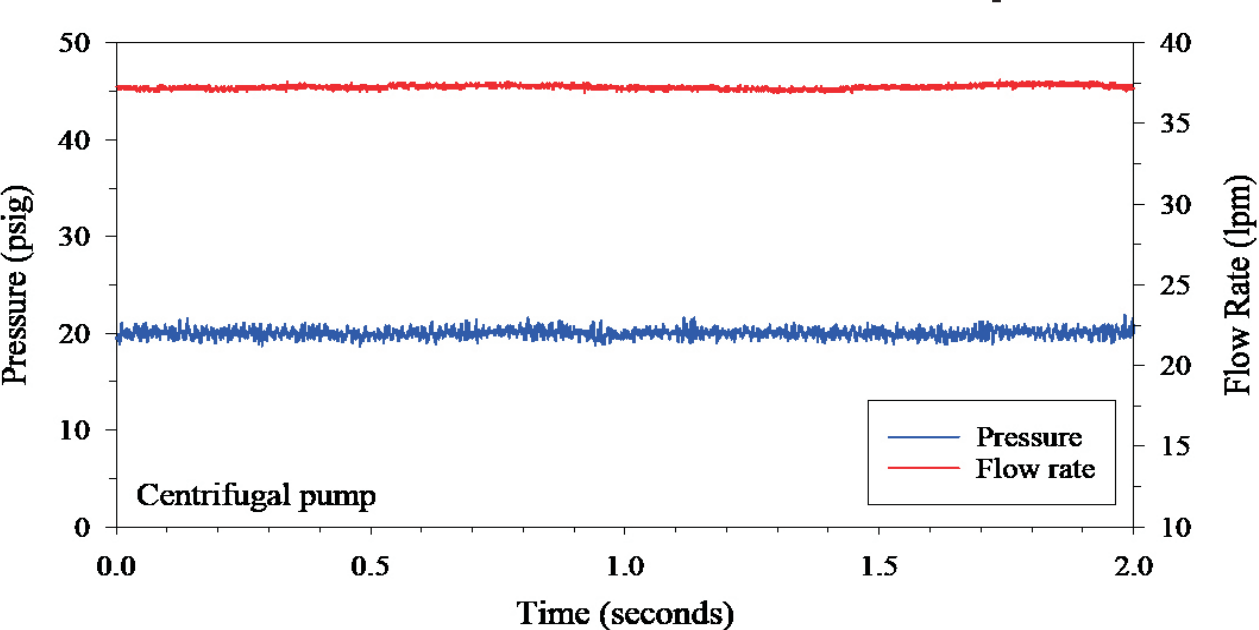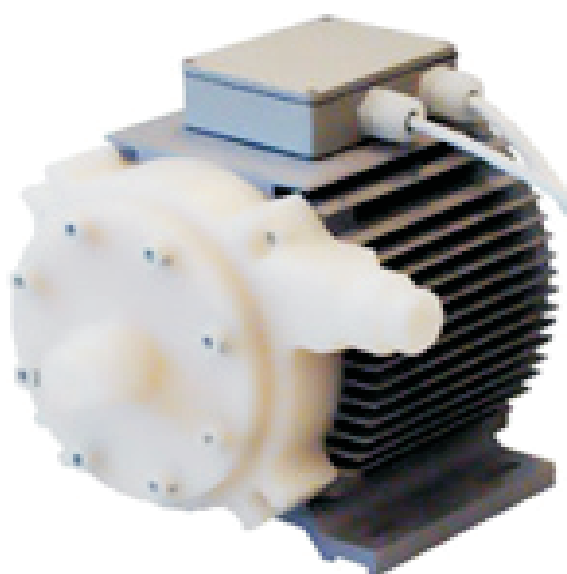

Filter Retention Efficiency vs. Pressure Pulsation

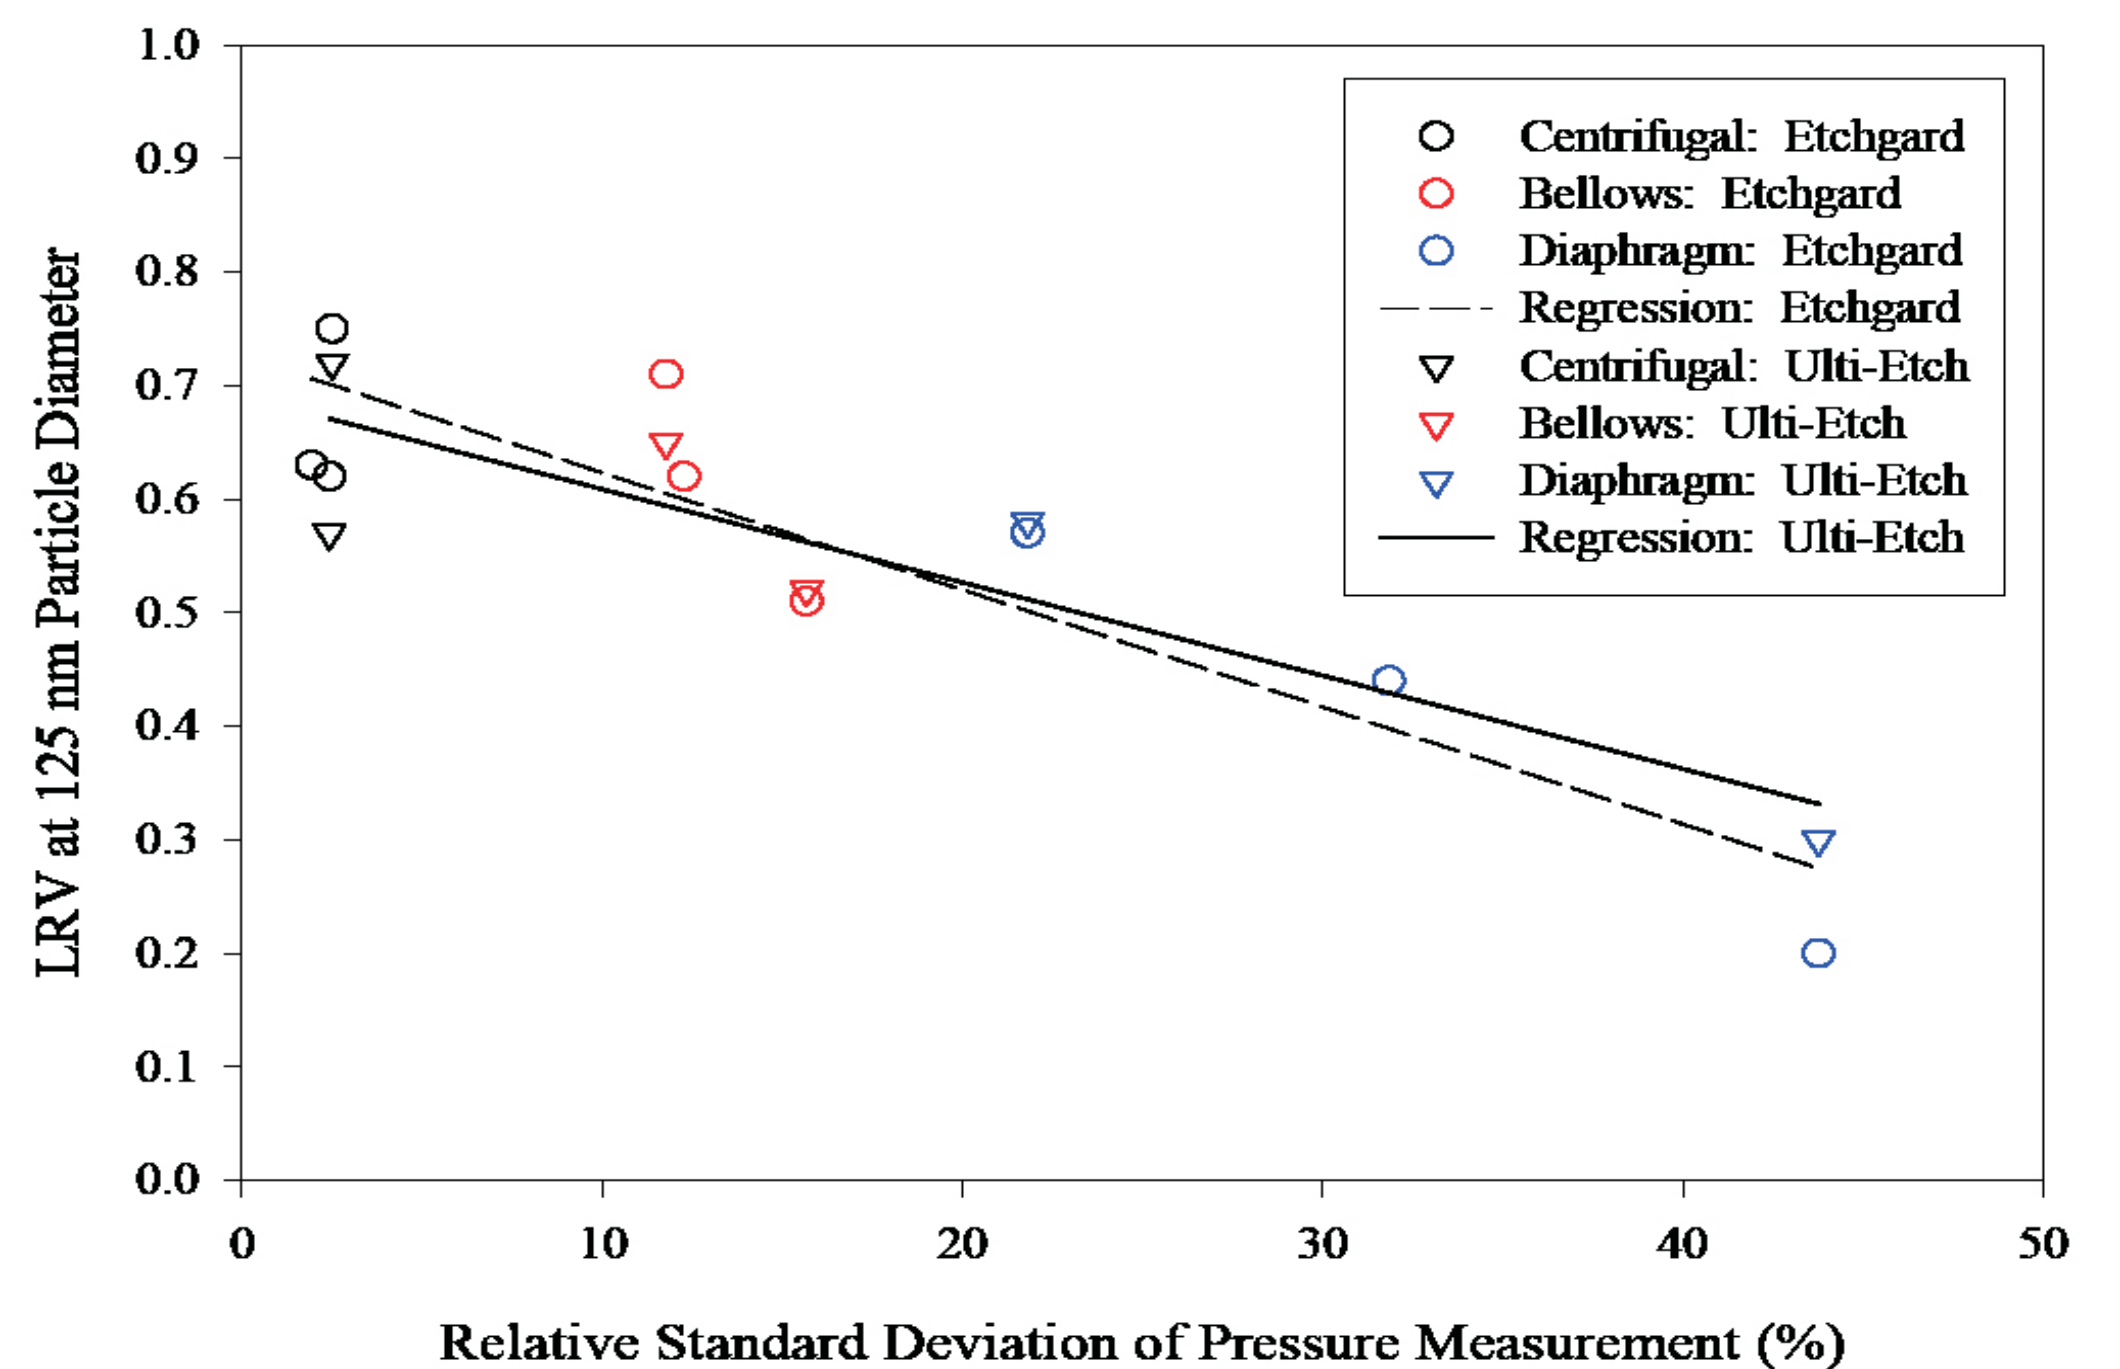

■ Electronic Control OF Flow And Pressure

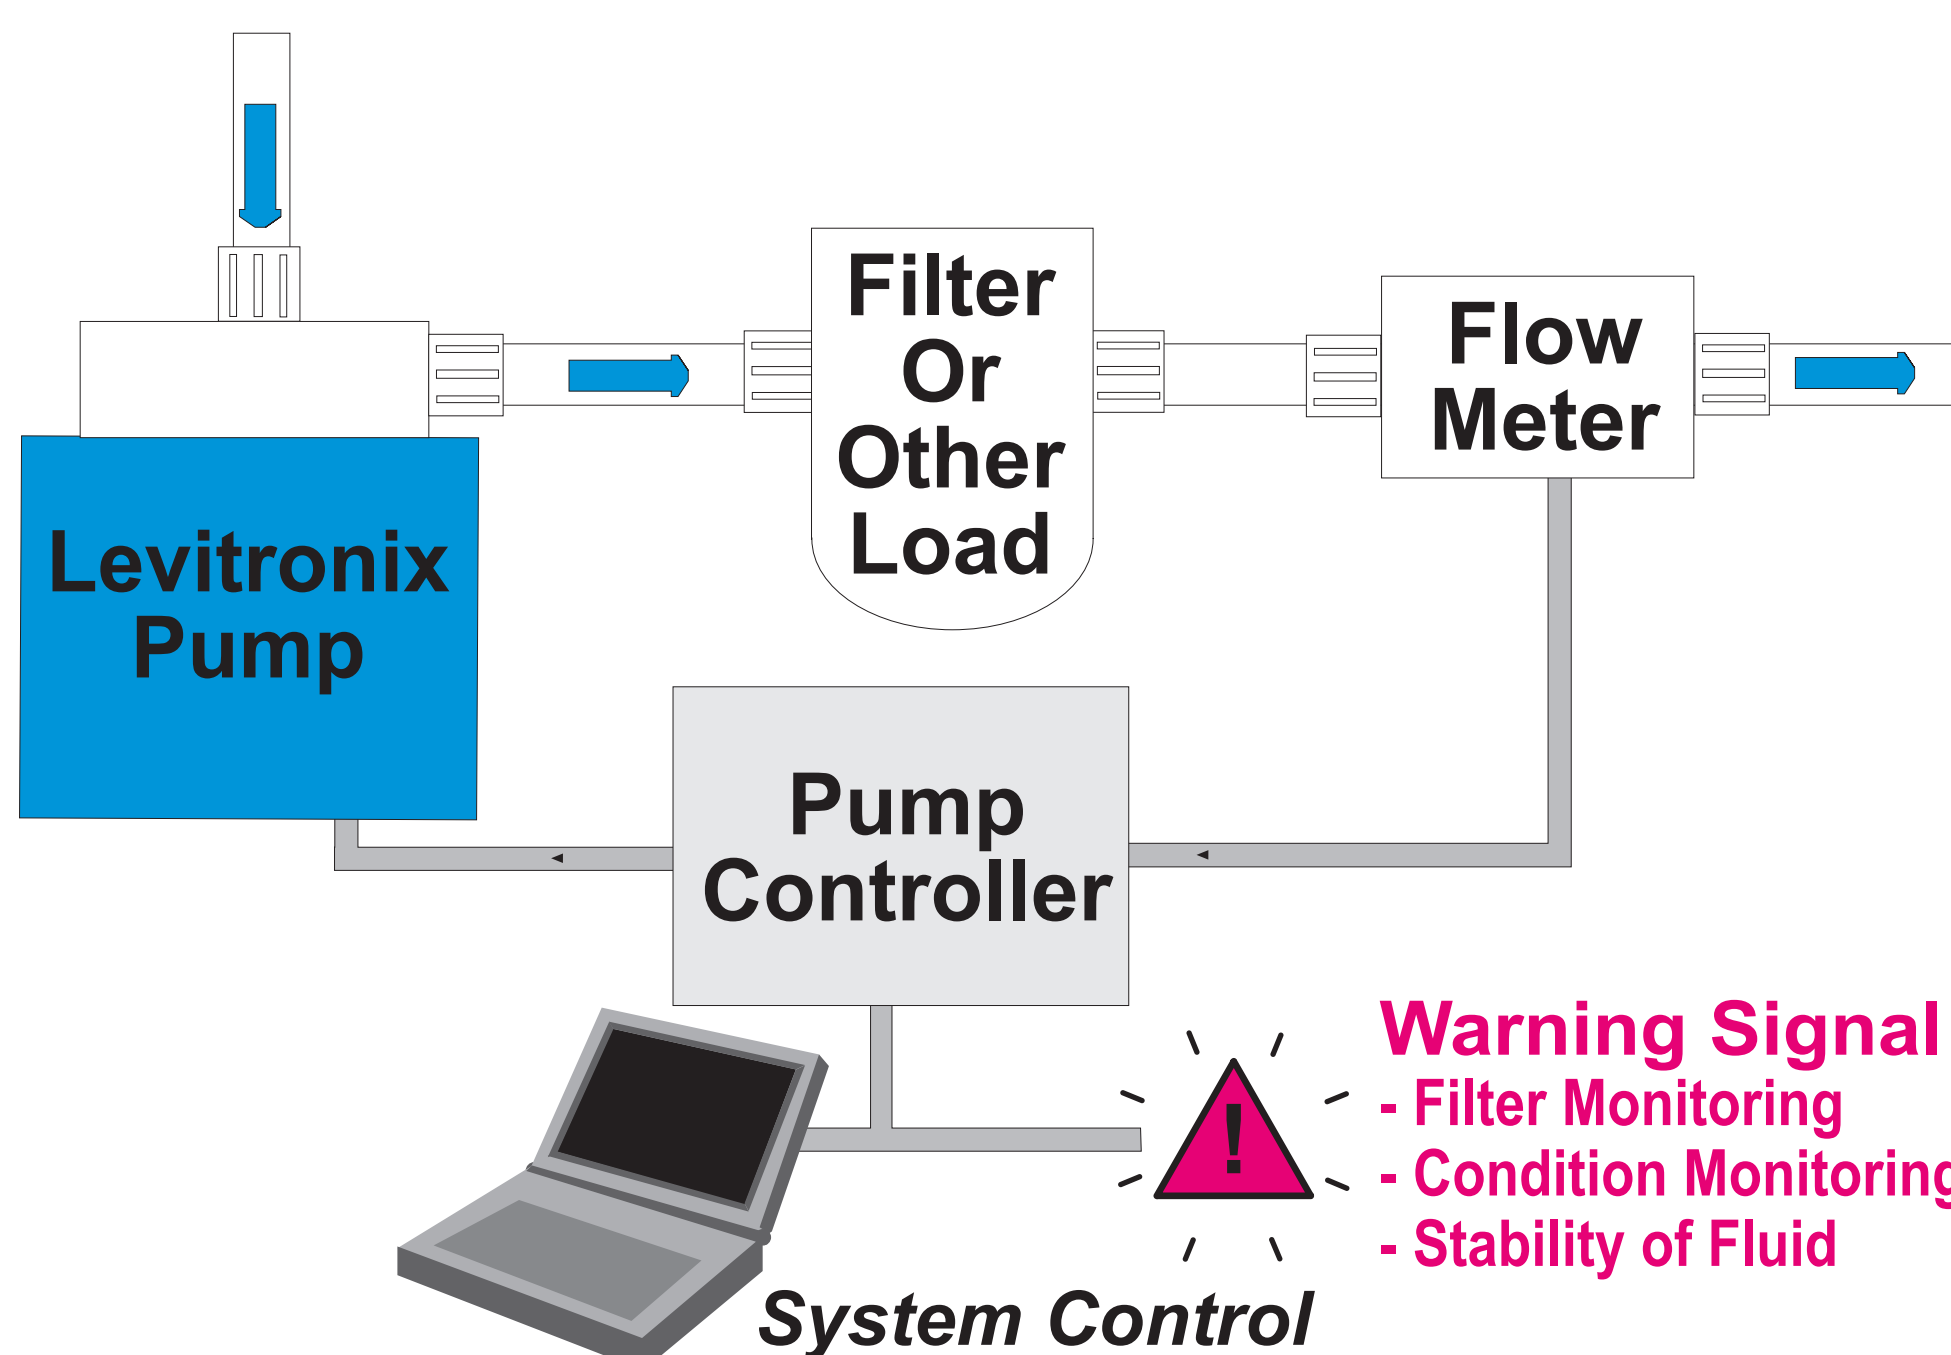

- Control OF Flows < 1mL/min
- Wide Flow Range With Single Pump
- Integrated Condition Monitoring