


## **Better Pumps for Better Yield!**

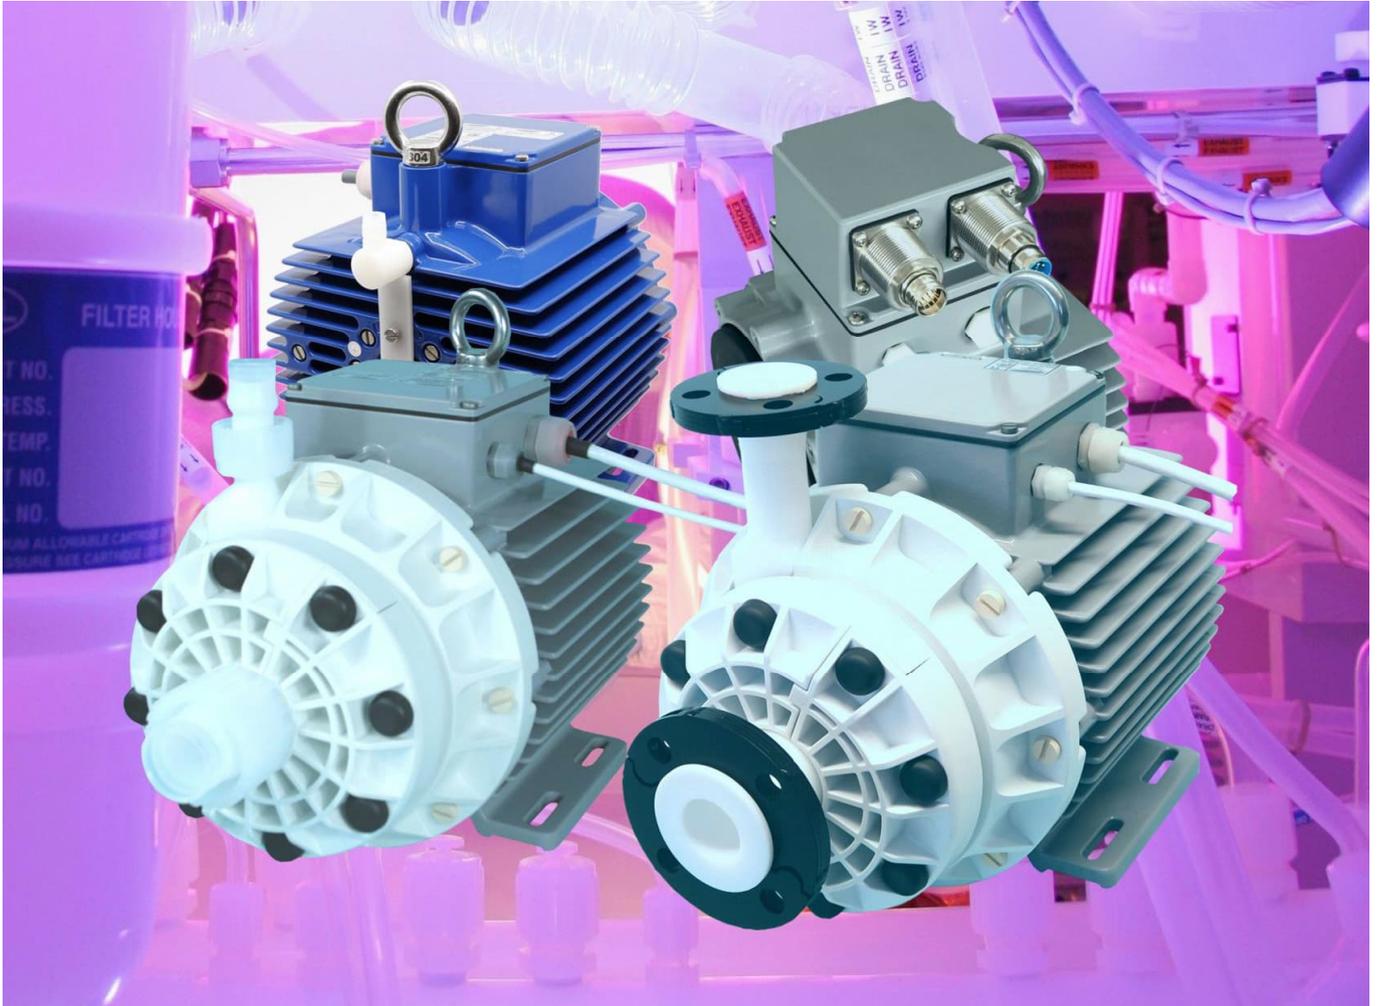

**No Seals, No Bearings,  
No Particle Contamination!**

### **BPS-4000.S**

*(Same fit, form and function as BPS-4000 models)*

**6.5 bar**                      **(94 psi)**  
**280 liters/min**            **(74 gallons/min)**

**Levitronix® MagLev Pump Technology  
Better Pumps for Better Yield!**

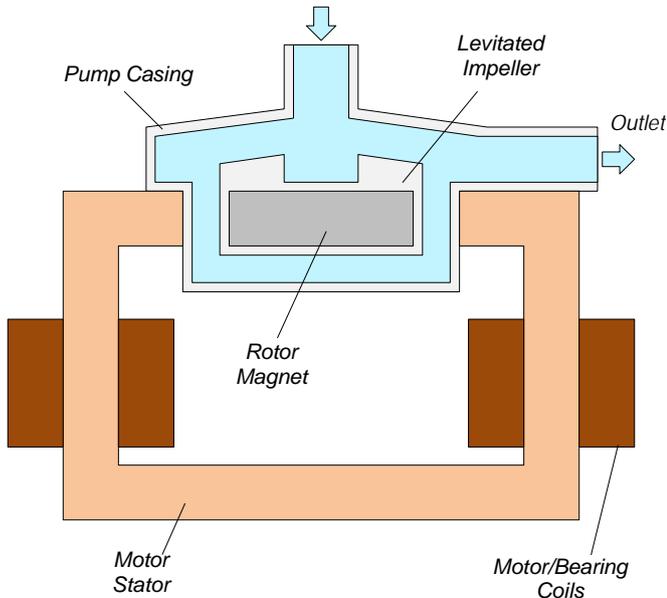


Figure 1: Schematic of the main elements of the MagLev centrifugal pump

**REVOLUTIONARY MAGNETICALLY  
LEVITATED CENTRIFUGAL PUMP**

The BPS-4000 pump system is a revolutionary centrifugal pump that has no bearings to wear out or seals to break down and fail. Based on the principles of magnetic levitation, the pump's impeller is suspended, contact-free, inside a sealed casing and is driven by the magnetic field of the motor (Figure 1). The impeller and casing are both fabricated from chemical-resistant high purity fluorocarbon resins. Together with the rotor magnet they make up the pump head. Fluid flow rate and pressure are precisely controlled by electronically regulating the impeller speed and eliminating pulsation.

**SYSTEM BENEFITS**

- Extremely low particle generation due to the absence of mechanically contacting parts. Reduces particle contamination issues in wet processes by generating 10 to 50 times fewer particles compared to other pumps.
- Increases equipment uptime.
- Lower maintenance costs by eliminating valves, bearings, rotating seals and costly rebuilds.
- Reduced risk of contamination due to the self-contained design with magnetic bearings.
- Very gentle to sensitive fluids due to low-shear design.
- No narrow gaps and fissures where particles or micro-organisms could be entrapped.
- Smooth, continuous flow without pressure pulsation.
- Electronic speed control.
- Compact design compared to pneumatic and magdrive pumps. Saves valuable space in process tools by having a smaller footprint.
- Proven technology in medical and semiconductor industry (MTBF > 30 years).

**APPLICATIONS**

- Semiconductor wet processing.
- Solar cell production.
- Flat panel display manufacturing.
- Hard-disk fabrication.
- Printer ink handling.
- Pharmaceutical production.

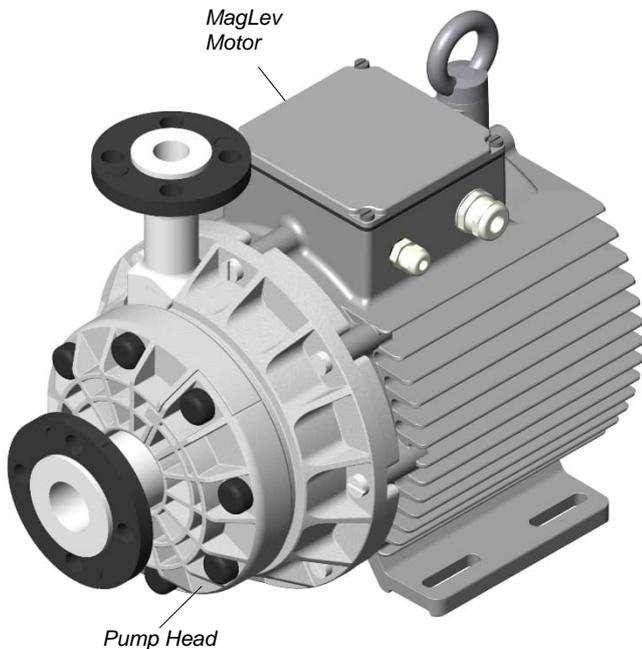


Figure 2: MagLev pump motor with pump head

## STAND-ALONE SYSTEM CONFIGURATION

The stand-alone configuration of the BPS-4000 pump system (see Figure 5) consists of a controller with an integrated user panel allowing the operator to set the speed manually. The speed is automatically stored in the internal EEPROM of the controller. As an option, the speed can also be set with an analog signal (see specification for Position 3a in Table 2).

## EXTENDED SYSTEM CONFIGURATION

The extended version of the BPS-4000 pump system (Figure 6) consists of a controller with an extended PLC interface. This allows setting the speed by an external signal (see specification of Position 3b in Table 2) and enables precise closed-loop flow or pressure control in connection with either a flow or a pressure sensor. A USB interface allows communication with a PC in connection with the Levitronix® Service Software. Hence parameterization, firmware updates and failure analysis are possible.


## ATEX/IECEx SYSTEM CONFIGURATION

An ATEX/IECEx certified motor together with the pump head allows installation of motor and pump head within an ATEX Zone 2 area (see Figure 7). The ATEX motor (Pos. 2b in Table 2) comes with special connectors and relevant extension cables (Pos. 5a and 5b in Table 3). An ATEX conform solution is needed for the motor cables to leave the ATEX area. One option is an ATEX certified cable sealing system as listed in Table 4 (see Pos. 9) and shown in Figure 11.


The ATEX/IECEx motors have also a Japanese, Korean and Taiwanese Ex certification and marking.

## HAZLOC SYSTEM CONFIGURATION

A Hazardous Location NRTL certified motor together with the pump head allows installation of motor and pump head within a Class I Division 2 area (see Figure 7). The HazLoc motor (Pos. 2c in Table 2) comes with special connectors and NPT threads on the motor housing to attach a conduit for the cables to leave the hazardous location area.

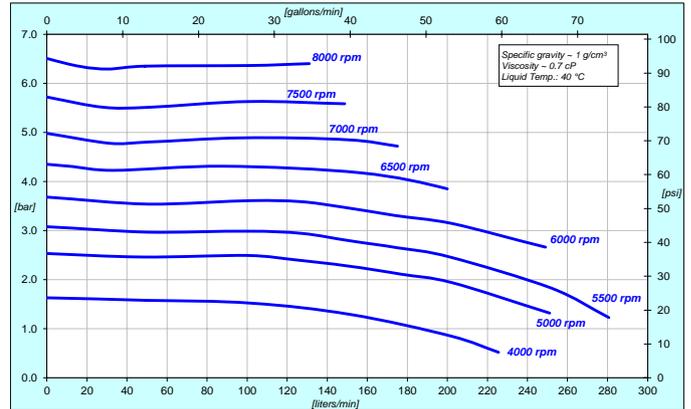

**Figure 3: Pressure/flow curves**  
Note 1: Typical curves measured with pump head LPP-4000.7.

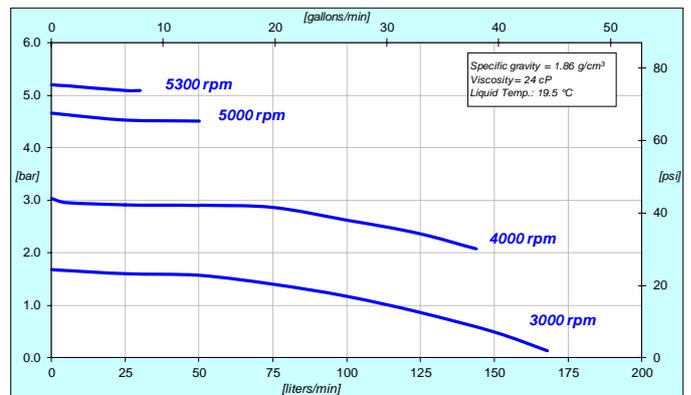

**Figure 4: Pressure/flow curves for high density/viscosity liquids**  
Note 1: Typical curves measured with pump head LPP-4000.7.

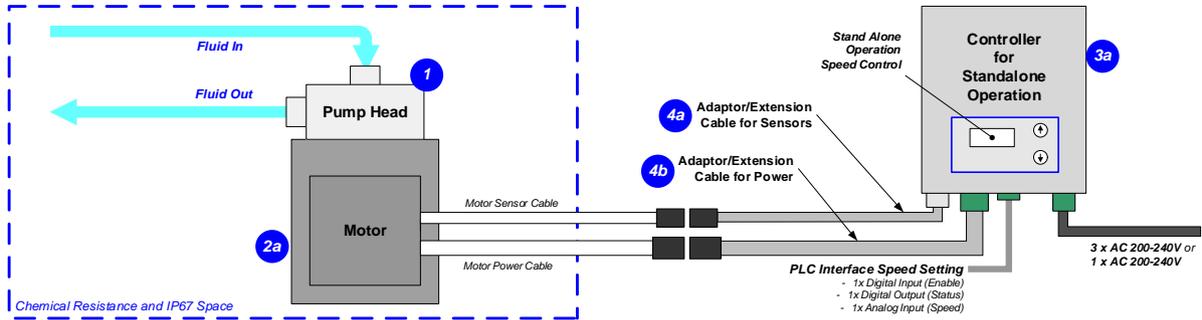


Figure 5: System configuration for standalone operation (speed setting with integrated user panel)

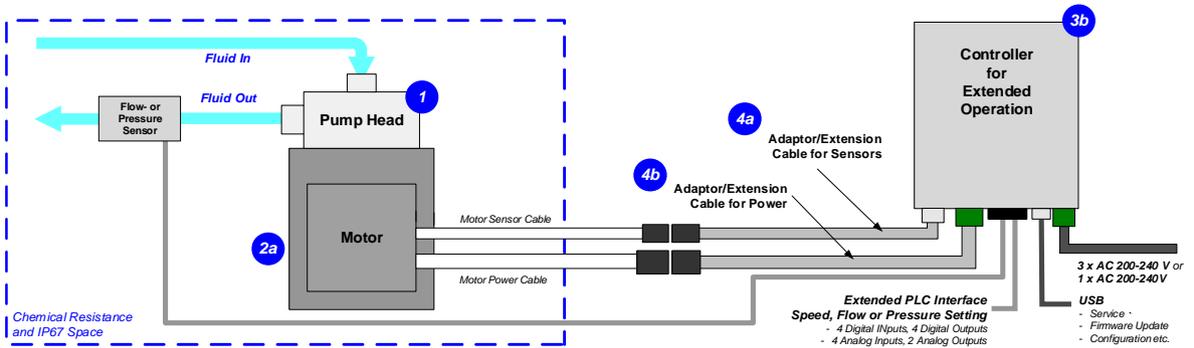


Figure 6: Extended operation (flow or pressure control) with extended controller



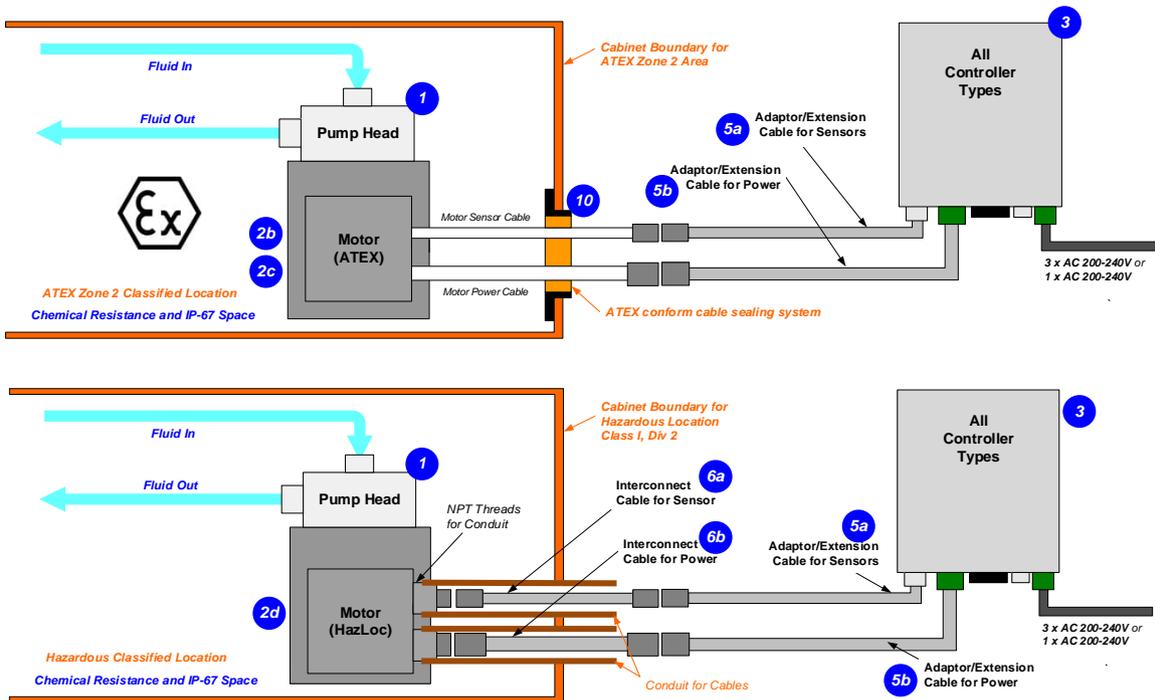




Figure 7: System Configuration for ATEX and Hazardous Location applications

## DIMENSIONS OF MAIN COMPONENTS

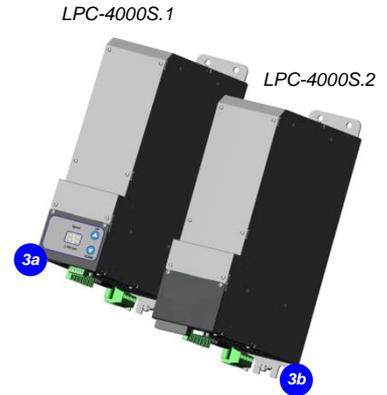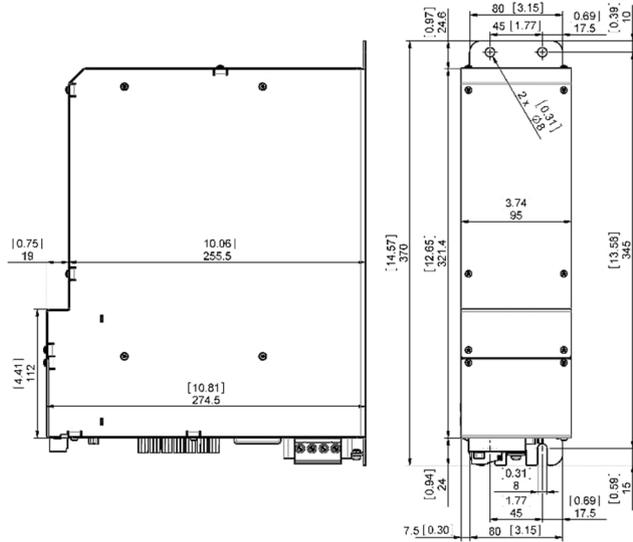

**Figure 8:** Basic dimensions of controllers LPC-4000S.x  
Note 1: Non-tolerated dimensions are for reference only.

mm [inch]	LPP-4000.7 (Flange Fitting)	LPP-4000.8 (Pillar Fitting)
A	414.6 / [16.32]	430 / [16.93]
B	273 / [10.75]	273 / [10.75]
C	337.6 / [13.29]	329.3 / [12.96]
D	44 / [1.73]	44 / [1.73]
E	204.6 / [8.06]	196.3 / [7.73]
F	Motors 2a,2b,2c: 300.8 / [11.84] HazLoc Motors 2d: 365.8 / [14.40]	
Inlet Outlet	Ansi Flange 1.5" Ansi Flange 1"	Pillar FM 1.5" Pillar FM 1"

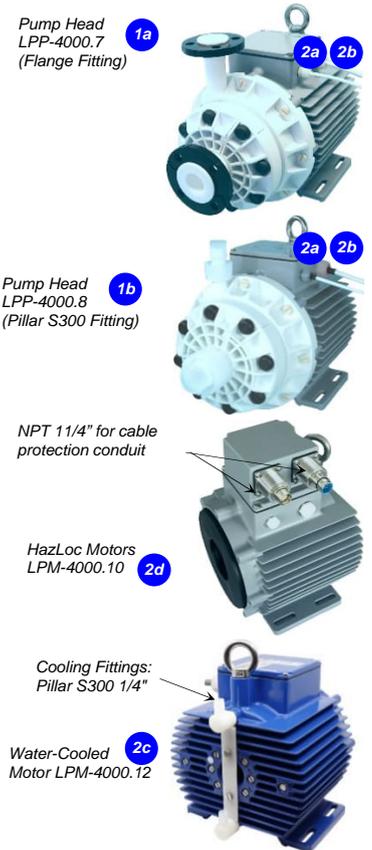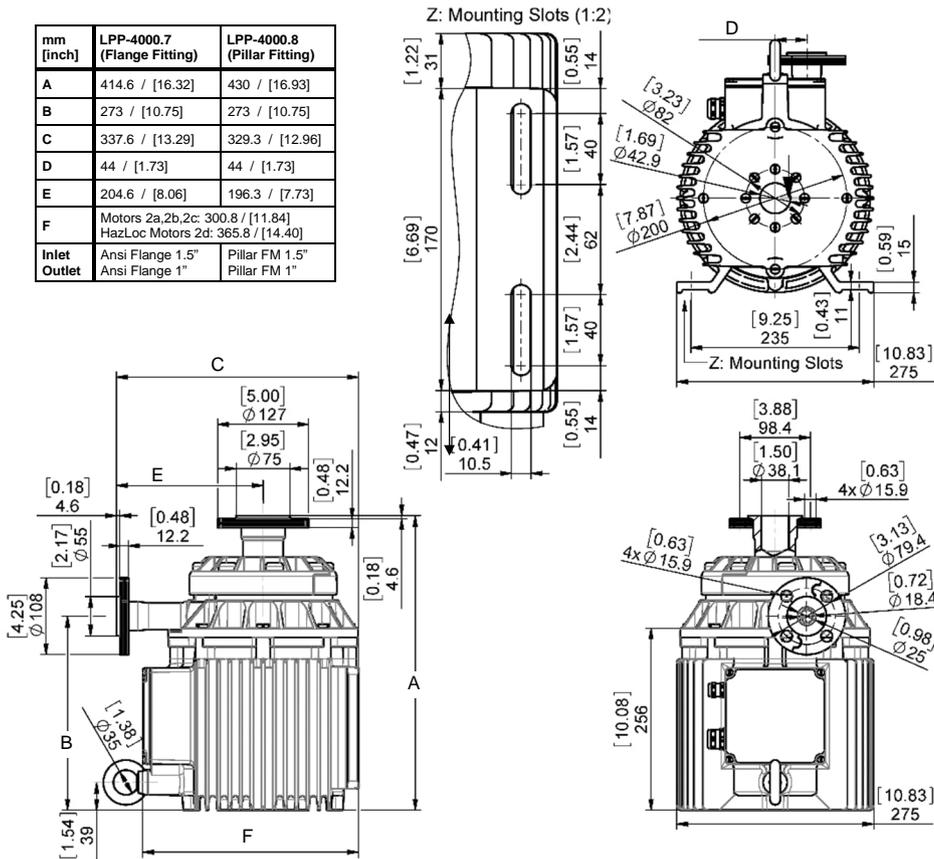

**Figure 9:** Basic dimensions of motors LPM-4000.x with pump heads LPP-4000.7/8  
Note 1: Detailed Drawing with pump head LPP-4000.8 (Pillar fitting), hazardous location motors or motors with integrated water-cooling are available on request. Note 2: Non-tolerated dimensions are for reference only.



www.levitronix.com

# Bearingless Pump System BPS-4000 MagLev Pumps for Ultrapure Fluid Handling

## ORDER INFORMATION

System Name	Article #	Pump Head	Motor	Controller	Note
BPS-4000.64S BPS-4000.65S	100-91841 100-91842	LPP-4000.7 (PFA Impeller, Flange Fittings)	LPM-4000.2	LPC-4000S.1 LPC-4000S.1	Adaptor/Extension (0.5 – 10 m) cables according to Table 3 (positions 4a and 4b) have to be ordered as separate articles. Certifications: CE, IECEx CB scheme, ETL (NRTL). Note: Includes Eyebolt Seal Set (see Table 4)
BPS-4000.67S (ATEX) BPS-4000.68S (ATEX)	100-91844 100-91845		LPM-4000.8 (ATEX)	LPC-4000S.1 LPC-4000S.2	Adaptor/Extension (0.5 – 10 m) cables according to Table 3 (positions 5a and 5b) have to be ordered as separate articles. Certifications: CE, IECEx CB scheme, ETL (NRTL), ATEX and IECEx. Note: Includes Eyebolt Seal Set (see Table 4)
BPS-4000.88S (Waterc.) BPS-4000.89S (Waterc.)	100-91847 100-91848		LPM-4000.12 (Waterc.)	LPC-4000S.1 LPC-4000S.2	Adaptor/Extension (0.5 – 10 m) cables according to Table 3 (see also Figure 7) have to be ordered as separate articles. Certifications: CE, IECEx CB scheme, ETL (NRTL), HazLoc C11 Div2 Note: Includes Eyebolt Seal Set (see Table 4)
BPS-4000.70S (HazLoc) BPS-4000.71S (HazLoc)	100-91850 100-91851		LPM-4000.10 (HazLoc)	LPC-4000S.1 LPC-4000S.2	Adaptor/Extension (0.5 – 10 m) cables according to Table 3 (positions 4a and 4b) have to be ordered as separate articles. Certifications: CE, IECEx CB scheme, ETL (NRTL). Note: Includes Eyebolt Seal Set (see Table 4)
BPS-4000.73S BPS-4000.74S	100-91853 100-91854	LPP-4000.8 (PFA Impeller, Pillar Fittings)	LPM-4000.2	LPC-4000S.1 LPC-4000S.2	Adaptor/Extension (0.5 – 10 m) cables according to Table 3 (positions 4a and 4b) have to be ordered as separate articles. Certifications: CE, IECEx CB scheme, ETL (NRTL). Note: Includes Eyebolt Seal Set (see Table 4)
BPS-4000.76S (ATEX) BPS-4000.77S (ATEX)	100-91856 100-91857		LPM-4000.8 (ATEX)	LPC-4000S.1 LPC-4000S.2	Adaptor/Extension (0.5 – 10 m) cables according to Table 3 (positions 5a and 5b) have to be ordered as separate articles. Certifications: CE, IECEx CB scheme, ETL (NRTL), ATEX and IECEx. Note: Includes Eyebolt Seal Set (see Table 4)
BPS-4000.90S (Waterc.) BPS-4000.91S (Waterc.)	100-91859 100-91860		LPM-4000.12 (Waterc.)	LPC-4000S.1 LPC-4000S.2	Adaptor/Extension (0.5 – 10 m) cables according to Table 3 (see also Figure 7) have to be ordered as separate articles. Certifications: CE, IECEx CB scheme, ETL (NRTL), HazLoc C11 Div2. Note: Includes Eyebolt Seal Set (see Table 4)
BPS-4000.79 (HazLoc) BPS-4000.80 (HazLoc)	100-91862 100-91863		LPM-4000.10 (HazLoc)	LPC-4000S.1 LPC-4000S.2	

Table 1: Standard system configurations

Pos.	Component	Article Name	Article #	Characteristics	Value / Feature
1a 1b	Pump Head	LPP-4000.7 (Flange) LPP-4000.8 (Pillar)	100-91242 100-91241	Impeller / Pump Housing Sealing Ring Fittings Type / Size Max. Flow / Max. Diff. Pressure Max. Viscosity / Density Max. Liquid Temp.	PFA / PTFE (wet parts), reinforcement of housing with PP+GF and SS+PTFE FFPM (FFKM) perfluorelastomer ANSI flange or Pillar Super 300 / 1.5" inlet and 1" outlet 280 liters/min / 74 gallons/min / 6.5 bar / 94 psi 30 cP / 1.8 g/cm <sup>3</sup> Full performance: 70 °C / 158 °F. Reduced performance: 70-90 °C / 158-194 °F.
2a	Motor	LPM-4000.2	100-10043	Housing Cable / Connectors	ETFE coated aluminum, waterproofed (IP67 without connectors) 2x 3 m long cables with FEP jacket / 2x circular connectors (AMP types)
2b 2c	Motor (ATEX, IECEx)	LPM-4000.8 LPM-4000.12 (watercool.)	100-10048 100-10183	ATEX/IECEx Marking Housing Cable / Connectors Watercooling	ATEX / IECEx II 3G Ex ec h mc IIC T4 Gc / IECEx II 3D Ex h tc IIIC T105°C Dc LPM-4000.8/12: ETFE/Epoxy coating LPM-4000.8/12: 2x 3m cables with FEP/PVC jacket / 2x circular (M23, IP67) LPM-4000.12 motor: integrated water cooling with Pillar S300 1/4" male fittings.
2d	Motor (HazLoc)	LPM-4000.10 (ETFE)	100-10115	Hazardous Location Marking Connectors	Class I, Div2, Groups A-D T5 Class II, Div2, Groups E-G T5 2x circular (M23, IP67) / NPT 1/4" for cable protection conduit
3a	Standalone Controller (User Panel)	LPC-4000S.1	100-30156 (Connectors included)	Voltage / Electrical Power Housing Rating Interfaces for Standalone Controller Standard Firmware	1 x 200-240 VAC or 3x 200-240VAC ± 10%, 50/60 Hz / 4 kW IP20 Panel to set speed (automatic storage on internal EEPROM) PLC with 1x analog input ("Speed") 4 – 20 mA 1x digital input ("Enable") 0 – 24 V (optocoupler) 1x digital output ("Status") 0 – 24 V (relay) F1.25
3b	Extended Controller (PLC and USB)	LPC-4000S.2	100-30145 (Connectors included)	Interfaces for Extended Controller Standard Firmware	PLC with 4 digital inputs with 0 – 24 V (optocoupler) 4 digital outputs with 0 – 24 V (relay) 2 analog inputs with 4 – 20 mA 2 analog outputs with 0 – 10 V USB interface (for service and system monitoring) F1.48

Table 2: Specification of standard components

Note 1: ATEX IECEx motors are also certified/marked for Japanese, Korean and Taiwanese Ex. Note 2: Controller LPC-4000S.3 with RS232 interface available. Note 3: Motor version with ETFE coating and FEP cables available.

Pos.	Component	Article Name		Article #		Characteristics	Value / Feature
		Sensor Cable (a)	Power Cable (b)	Sensor (a)	Power (b)		
4a 4b	Extension Adaptor Cable for Sensor (a) and Power (b)	MCAS-600.1-05 (0.5 m) MCAS-600.1-30 (3 m) MCAS-600.1-50 (5 m) MCAS-600.1-70 (7 m) MCAS-600.1-100 (10 m)	MCAP-4000.1-05 MCAP-4000.1-30 MCAP-4000.1-50 MCAP-4000.1-70 MCAP-4000.1-100	190-10122 190-10123 190-10124 190-10101 190-10125	190-10172 190-10173 190-10174 190-10175 190-10176	Jacket Material Connector Types Connector Material	PVC Circular AMP to D-SUB Plastics (PA)
5a 5b	Extension Adaptor Cable for Sensor (a) and Power (b) Wires	MCAS-600.3-05 (0.5 m) MCAS-600.3-30 (3 m) MCAS-600.3-50 (5 m) MCAS-600.3-70 (7 m) MCAS-600.3-100 (10 m)	MCAP-4000.2-05 MCAP-4000.2-30 MCAP-4000.2-50 MCAP-4000.2-70 MCAP-4000.2-100	190-10158 190-10159 190-10130 190-10160 190-10161	190-10180 190-10181 190-10182 190-10183 190-10184	Jacket Material Connector Types Connector Material	PVC Circular M23 (IP67) to D-SUB Metallic – Nickel coated
6a 6b	Interconnect Cable for Sensor (a) and Power (b) Wires	MCIS-2000.1-05 (0.5 m) MCIS-2000.1-30 (3 m) MCIS-2000.1-50 (5 m) MCIS-2000.1-70 (7 m) MCIS-2000.1-100 (10 m)	MCIP-4000.1-05 MCIP-4000.1-30 MCIP-4000.1-50 MCIP-4000.1-70 MCIP-4000.1-100	190-10391 190-10392 190-10393 190-10394 190-10395	190-10402 190-10403 190-10404 190-10405 190-10406	Jacket Material Connector Types Connector Material	PVC Circular M23 (IP67) to Circular M23 Metallic – Nickel coated

Table 3: Specification of adaptor/extension cables

Pos.	Component	Article Name	Article #	Characteristics	Value / Feature
7a	Air Cooling Module	ACM-4000.1	190-10177	Material / Connection Port Air Pressure	PP / NPT 1/2" ~1 - 3 bar (14 – 43 psi)
7b	Air Cooling Module	ACM-4000.3	190-10190	Material	PP with conductive additive for operation with ATEX motor
8	Fan Cooling Module	FCM-4000.1	190-10178	Housing / Cable Material Supply Spec. / IP Rating	PP (+ 40% Talcum) / PVC, 6 m, open-end wires 20.4 – 27.6 VDC, 31.2 W, 1.3 A / IP65
9	Impeller Exchange Kit (For pump head LPP-4000.7/8)	IEK-4000.5	100-91244	Impeller (A) / O-Ring (B) Pump Casing Screws (C) Pump Motor Screws (D) Relevant Pump Heads	PFA / O-Ring FFFPM (FFKM), 110.7 x Ø3.53 8 pcs. M10 x 40, stainless steel with washer (F) and protective FPM cover (E) 8 pcs. M10 x 35, stainless steel with PTFE coating LPP-4000.7/8
10	ATEX Cable Sealing System	ACS-A.1 (Roxtec)	100-90292	Sleeve (A) and Gasket (B) Frame (C), 2x Cable Module (D)	Stainless steel and EPDM Roxylon (EPDM rubber) Note: Lubricant (E) and measurement plates (F) are included.
11	Eyebolt Seal Set	M16x16 PVDF/FFKM	100-90913	Screw / Gasket Material Purpose	M16 x 16 (SW24), PVDF / FKM Chemical protection of lifting eyebolt mounting thread of motor.
12	Cable Shield Grounding Module	CSG-4000.1	190-10487	Purpose	Can be mounting on power cables MCAP-4000.5 improved EMC (emissions) behavior in electrical cabinets.

Table 4: Specification of accessories

**Levitronix® MagLev Pump Technology**  
**Better Pumps for Better Yield!**

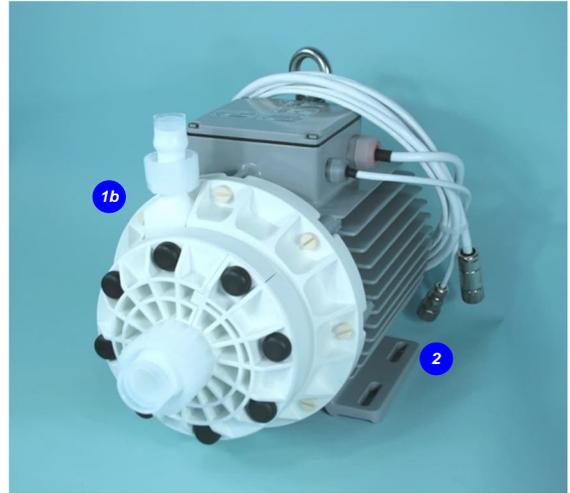
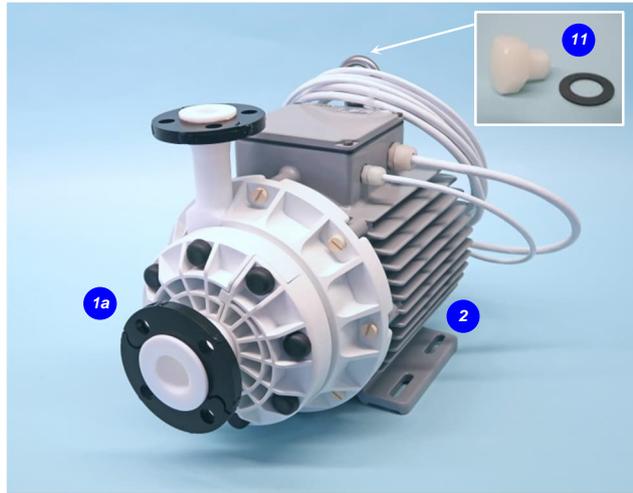


Figure 10: Pump system BPS-4000 with standard components

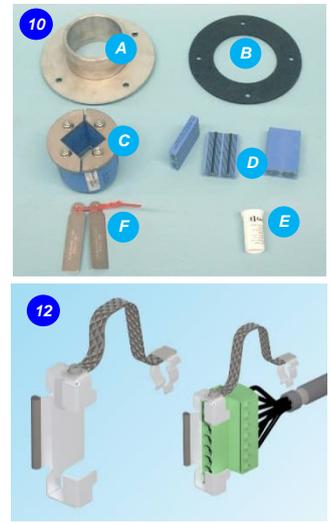


Figure 11: Accessories

**Levitronix<sup>®</sup> MagLev Pump Technology  
Better Pumps for Better Yield!**



www.levitronix.com

# Bearingless Pump System BPS-4000 MagLev Pumps for Ultrapure Fluid Handling

## LEVITRONIX® THE COMPANY

Levitronix® is the world-wide leader in magnetically levitated bearingless motor technology. Levitronix® was the first company to introduce bearingless motor technology to the Semiconductor, Medical and Life Science markets. The company is ISO 9001 certified. Production and quality control facilities are located in Switzerland. In addition, Levitronix® is committed to bring other highly innovative products like the LEVIFLOW® flowmeter series to the market.



### Headquarter and European Contact

Levitronix GmbH  
Bändliweg 30  
CH-8048 Zurich  
Switzerland

Phone: +41 44 974 4000  
E-Mail: [salesEurope@levitronix.com](mailto:salesEurope@levitronix.com)

### US Contact

Levitronix Technologies Inc.  
10 Speen Street, Suite 102  
Framingham, Massachusetts 01701  
USA

Phone: +1 508 861 3800  
E-Mail: [salesUS@levitronix.com](mailto:salesUS@levitronix.com)

### Japan Contact

Levitronix Japan K.K.  
Wing Eight 5floor, 4-16-4  
Asakusabashi, Taito-ku  
Tokyo, 111-0053 Japan

Phone: +81 3 5823 4193  
E-Mail: [salesJapan@levitronix.com](mailto:salesJapan@levitronix.com)

### Taiwan Contact

Levitronix Taiwan  
5F, No. 251, Dong Sec. 1,  
Guangming 6th Rd., Chu Pei City,  
Hsin-Chu 302, Taiwan, R.O.C.

Phone: +886 3 657 6209  
E-Mail: [salesAsia@levitronix.com](mailto:salesAsia@levitronix.com)

*This document and its content are the property of Levitronix® and shall not be reproduced, distributed, disclosed or used for manufacturing or sale of Levitronix® products without the expressed written consent of Levitronix®.*

**Levitronix® MagLev Pump Technology  
Better Pumps for Better Yield!**