



LEVITRONIX®
MAGLEV FANS



DON'T LET YOUR
EXHAUST
CONTROL
YOUR PROCESS

LEVITRONIX®
Better Fans for Better Yield

CONSTANT CHAMBER PRESSURE WITH LEVITRONIX® MAGLEV FANS

Keep your chamber pressure constant with the Levitronix® MagLev Fan!

Placed on the exhaust line, the fan compensates for pressure fluctuations due to an inconsistent or insufficient central exhaust.

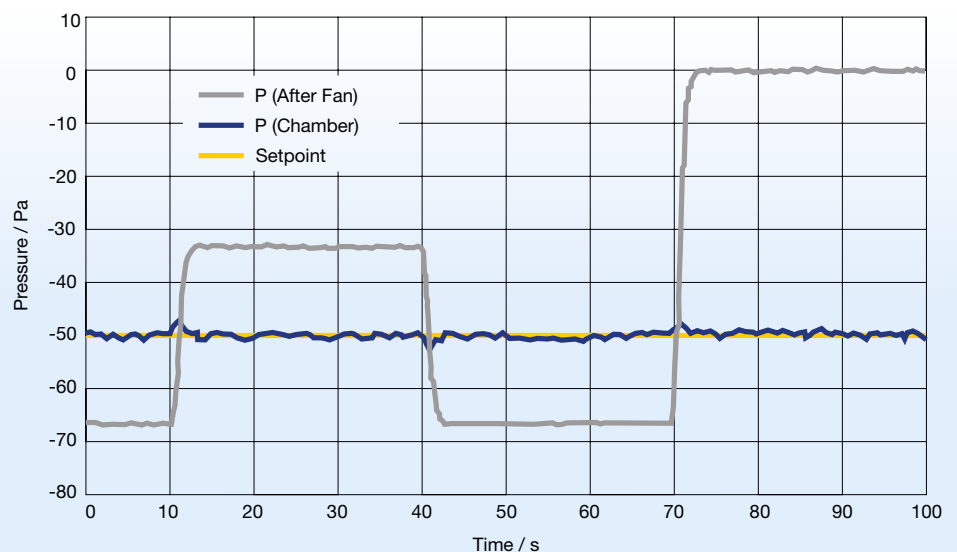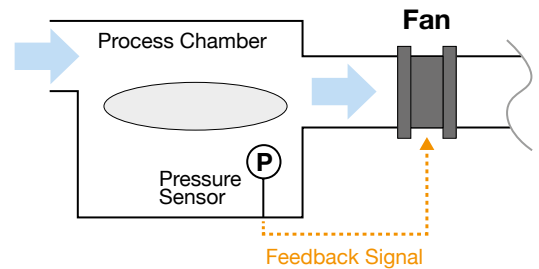

The MagLev Fan ensures constant pressure inside the process chamber. Connected to the pressure sensor, the MagLev Fan compensates for pressure fluctuations inside the chamber.

ADVANTAGES OF A LEVITRONIX® MAGLEV FAN




II 2G Ex h mb IIC T6 Gb

Highly Dynamic & Accurate Control //

compared to control valves

Fast acceleration and deceleration over a wide RPM range allows for dynamic control and therefore significantly faster reaction times than with butterfly control valves.

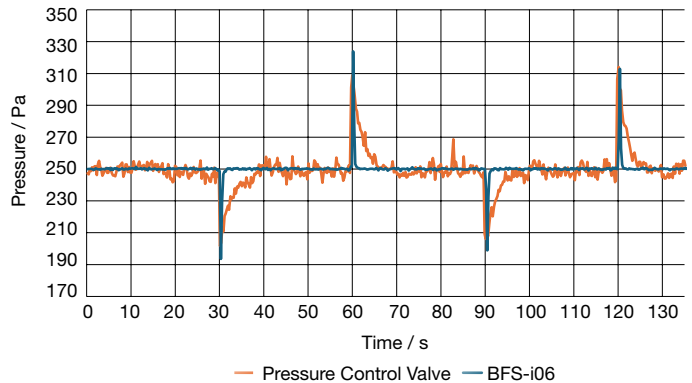

A Levitronix® fan adjusts a 20% pressure deviation in less than a second while a control valve needs 10 seconds.

Designed for Chemical Environments //

no bearing to fail

As the impeller and stator are completely encapsulated, the fan is extremely resistant against aggressive media. The wet material consists 100% of high-performance plastics.

ATEX / IECEx certified //

ideal for solvent applications

The BFS allows installation within an ATEX Zone 1 area for gas.

High Power Density //


high rotational speeds, high pressures

Contact- and frictionless active magnetic levitation enables high rotational speeds of up to 30'000 rpm, allowing the BFS to achieve high pressures like centrifugal blowers, but in an extremely compact footprint.



Extremely Long Life Time //

increase your equipment uptime

There are no bearings to wear out or seals to break down, increasing equipment uptime, extending the life of your process equipment, and reducing maintenance costs.

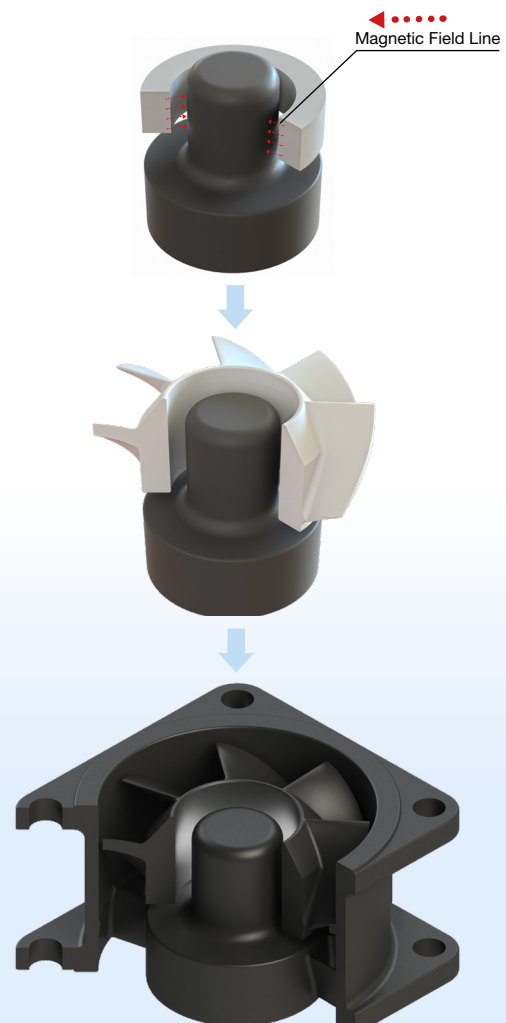

In a MagLev Fan, the rotor is completely free floating, which allows the rotor and stator to be completely encapsulated in high-performance plastic.

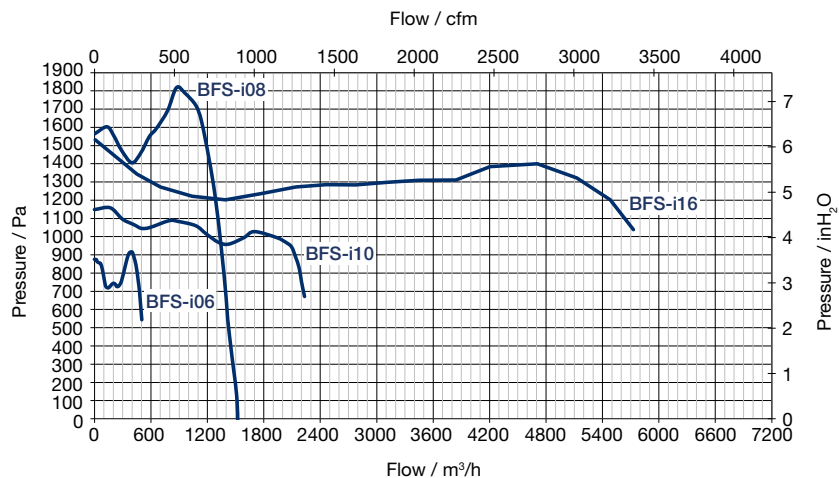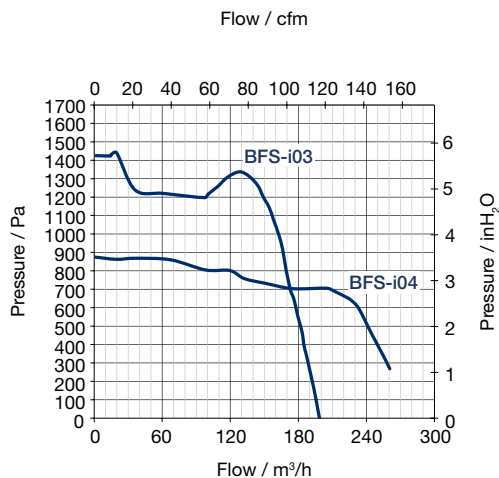

Overview // MagLev Fan Systems



BFS-i03

200 m³/h (118 cfm)
1420 Pa (5.7 inH₂O)



BFS-i04

260 m³/h (153 cfm)
870 Pa (3.5 inH₂O)



BFS-i06

500 m³/h (294 cfm)
915 Pa (3.68 inH₂O)



BFS-i08

1520 m³/h (895 cfm)
1800 Pa (7.2 inH₂O)



BFS-i10

2400 m³/h (1413 cfm)
1150 Pa (4.62 inH₂O)



Coming Soon

BFS-i16

5700 m³/h (3355 cfm)
1400 Pa (5.6 inH₂O)



Headquarter and European Contact

Levitronix GmbH
Bändliweg 30
CH-8048 Zurich
Switzerland

Phone +41 44 974 4000

E-Mail salesEurope@levitronix.com

US Contact

Levitronix Technologies Inc.
10 Speen Street, Suite 102
Framingham
Massachusetts 01701 USA

Phone +1 508 861 3800

E-Mail salesUS@levitronix.com

Japan Contact

Levitronix Japan K.K.
Wing Eight 5floor, 4-16-4
Asakusabashi, Taito-ku
Tokyo, 111-0053 Japan

Phone +81 3 5823 4193

E-Mail salesJapan@levitronix.com

Taiwan Contact

Levitronix Taiwan
Rm. 3, 8F., No.38, Taiyuan St.Zhu-
bei, City, Hsinchu County 302 Taiwan
R.O.C.

Phone +886 3 657 6209

E-Mail salesAsia@levitronix.com